

iCHiLL

XC200L Series User manual



INDEX

1	GENERAL ADVICE	4
2	GENERAL FEATURES	5
2.1	MAIN FUNCTION	5
3	XC200 L TABLE OF THE FEATURES	6
4	USER INTERFACE	7
4.1	FUNCTION OF THE LEDS OF THE KEY BUTTONS	7
4.2	USE OF THE LED ON THE MODELS VI620 - VI620S REMOTE PANELS	7
4.3	KEY FUNCTION	8
4.4	KEY COMBINANTION	8
4.5	LED AND ICONS	8
4.6	DISPLAY AND ICONS	9
4.7	MEANING/ FUNCTIONNING OF THE BOTTOM DISPLAY LED	10
5	REMOTE TERMINAL	10
6	FIRST INSTALLING	10
6.1	ON BOARD CLOCK (OPTIONAL)	10
6.2	RTC SETUP	10
7	WIRING CONNECTIONS	11
7.1	HARDWARE RESOURCES FOR XC260L	11
7.2	HARDWARE RESOURCES FOR XC261L	11
7.3	REMOTE PANELS VI620	12
8	ANALOG AND DIGITAL OUTPUT CONFIGURATION	13
8.1	ANALOG INPUT PB1 - PB2 - PB7 - PB8 - PB9 - PB10	13
8.2	ANALOG INPUT CONFIGURATION PB3 - PB4 - PB5 - PB6	13
8.3	DIGITAL INPUT CONFIGURATION ID1 - ID18	13
8.4	DIGITAL OUTPUT (RELAY) CONFIGURATION RL1- RL14	14
8.5	CONDENSER PROPORTIONAL CONTROL CONFIGURATION (2 OUTPUTS)	15
8.6	PROPORTIONAL OUTPUT CONFIGURATION 0 ÷ 10 VDC (4 OUTPUTS)	15
8.7	OTHER OUTPUTS	15
	ERRORE. IL SEGNA LIBRO NON È DEFINITO.	
9	TABLE OF THE PARAMETERS	16
10	PROGRAMMING WITH THE “HOT KEY 64”	33
10.1	DOWNLOAD: HOW TO PROGRAM AN INSTRUMENT WITH A PROGRAMMED “HOT KEY”	33
10.2	UPLOAD: HOW TO PROGRAM A “HOT KEY” WITH THE PARAMETERS OF THE INSTRUMENT	33
11	PROGRAMMING USING THE KEYBOARD	33
11.1	PASSWORD DEFAULT VALUES	33
11.2	ENTER THE PR1 - PR2 - PR3 PROGRAMMING LEVELS	33
11.3	HOW TO CHANGE A PARAMETER VALUE	33
11.4	CHANGE THE PASSWORD VALUE	33
11.5	ENTER THE PROGRAMMING LEVEL PR1	34
11.6	ENTER THE PROGRAMMING LEVEL PR2	34
11.7	ENTER THE PROGRAMMING LEVEL PR3	34
11.8	MOVE A PARAMETER LEVEL FROM PR2 TO PR1	35
11.9	MOVE A PARAMETER FROM PR3 TO PR2 TO PR1	35
11.10	VISIBILITY AND PARAMETER VALUE LOCKED	35
11.11	PROGRAMMING: DIGITAL INPUT AND OUTPUT POLARITY	35
11.12	CHANGE THE POLARITY OF THE DIGITAL INPUTS-OUTPUTS	35
12	DISPLAY LAYOUT	36
12.1	HOW TO SHOW THE MEASUREMENT LIST.	36

12.2	SHOW THE CIRCUIT 1 OR 2	36
13	CUSTOM DISPLAY	36
13.1	DEFAULT READ - OUT OF THE TOP DISPLAY	36
13.2	DEFAULT READ - OUT OF THE BOTTOM DISPLAY	36
13.3	FORCED READ - OUT OF THE TOP AND BOTTOM DISPLAY	37
13.4	DEFAULT DISPLAY READ - OUT OF THE REMOTE PANELS VI620S AND VI820S	37
14	DISPLAY INFORMATION	37
14.1	SHOW THE SET POINT VALUE	37
14.2	MODIFY THE SET POINT	37
14.3	SHOW THE ACTIVE SETPOINT DURING ENERGY SAVING OR DYNAMIC SETPOINT	37
14.4	DISPLAY IN REMOTE OFF	38
14.5	DISPLAY IN MOTOCONDENSING CONFIGURATION	38
15	FUNCTION MENU “ M” KEY	38
15.1	ALARM LIST: SHOW AND RESET	38
15.2	COMPRESSOR OVERLOAD ALARM RESET	38
15.3	COMPRESSOR OVERLOAD PASSWORD.	38
15.4	ALARM LOG LIST	38
15.5	ERASE THE ALARM LOG LIST	38
15.6	PASSWORD VALUE OF THE ALARM LIST	39
15.7	DISABLE – ENABLE A SINGLE CIRCUIT	39
15.8	READ-OUT OF A CIRCUIT NOT ENABLED	39
15.9	ENABLE OR DISABLE A SINGLE COMPRESSOR	39
15.10	READ-OUT OF A COMPRESSOR NOT ENABLED	39
15.11	READ-OUT OF THE COMPRESSOR DISCHARGE TEMPERATURE PROBE	39
15.12	READ-OUT OF THE RUNNING HOURS	39
15.13	RESET THE RUNNING HOUR	39
15.14	READ-OUT OF THE COMPRESSOR STARTS-UP	40
15.15	RESET THE STARTS-UP NUMBER	40
15.16	READ-OUT OF THE PROPORTIONAL OUTPUT PERCENTAGE OF THE CONDENSER FAN CONTROL	40
15.17	READ-OUT OF THE FOUR PROPORTIONAL OUTPUT	40
15.18	READ-OUT OF THE TIME COUNTING TO THE NEXT DEFROST	40
15.19	READ-OUT OF THE PROBES CONFIGURED TO CONTROL AN AUXILIARY OUTPUT RELAY	40
15.20	HOW TO DISPLAY THE TEMPAERATURE OF THE INTERNAL TEMPERAURE SENSOR OF THE REMOTE TERMINALS 1 OR 2	41
16	TABLE OF THE OUTPUT STATUS IN ALARM CONDITION	42
16.1	ALARM: “A” TYPE AND CORRESPONDING OUTPUT OFF	42
16.2	ALARM: “B” TYPE AND CORRESPONDING OUTPUT OFF	43
16.3	ALARM: “C” TYPE AND CORRESPONDING COMPRESSOR OUTPUT OFF	43
17	BLACK-OUT	43
18	INSTALLING AND MOUNTING	44
18.1	PANEL CUT- OUT	44
18.2	METAL FRONT FRAME	44
18.3	VERTICAL BOARDS VI620 – VI820 PANEL CUT-OUT	44
19	ELECTRICAL CONNECTIONS	46
20	TECHNICAL DATA	46

1 GENERAL ADVICE

- 1.1 PLEASE READ BEFORE USING THIS MANUAL
- · This manual is part of the product and should be kept near the instrument for easy and quick reference.
- · The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- · Check the application limits before proceeding.
- 1.2 SAFETY PRECAUTIONS
- · Check the supply voltage is correct before connecting the instrument.
- · Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- · Warning: disconnect all electrical connections before any kind of maintenance.
- · The instrument must not be opened.
- · In case of failure or faulty operation send the instrument back to the distributor or to "Dixell s.r.l." (see address) with a detailed description of the fault.
- · Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- · Fit the probe where it is not accessible by the end user.
- · In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

2 GENERAL FEATURES

XC200L is an electronic controller for chiller unit applications having one or two circuits:

- Air/air
- Air/water
- Water/water
- Motocondensing

Additional features :

- Heat pump with gas reversibility
- Free cooling function
- Recovery function

2.1 MAIN FUNCTION

Chiller management:

- One circuit up to 4 compressors
- Two circuits with different compressor number per circuit
- Double circuit up to 6 compressors
- Screw compressors

Compressor start up:

- Direct
- Part winding
- Star - delta

Compressor Soft start:

- With step valve
- Automatic start-unloading (without load).
- External by-pass gas valve.

Capacity step control:

- Continuous control
- Step control
- Modulation control (screw compressors)

Thermoregulation of the compressors

- Time running hours
- Number of start-up per hour

Cooling liquid injection

- With dedicated PTC probe

High temperature alarm of the compressor discharge side

- With dedicated PTC probe

Complete management of two pump groups of the water side

- 2 pumps evaporator side
- 2 pumps condenser side

Display layout customizable

- Temperature
- Pressure
- Time / RTC in real time

Other display readings

- Safety digital inputs
- Compressors running hours
- Number of compressor start-up
- Pump running hours
- Delay counting to the next defrost
- Proportional output percentage status
- Compressors discharge temperature

Alarm reset with custom password

- Alarm list
- Compressor thermal protection alarm

Single circuit stand-by

- Circuit maintenance
- To work with only one circuit

Single compressor stand-by

- Compressor maintenance
- Compressor malfunction

Pump down management

- With dedicated pressure switch
- Low pressure switch
- Low pressure transducer

Unloading circuit

- High temperature of the evaporator inlet water
- High temperature of the condenser inlet water (unit with recovery)
- High condensing pressure
- Low evaporating pressure

Maintenance messages

- Compressors
- Evaporator pumps
- Condenser pumps

Auxiliary relays

- Two configurable relay outputs not depending from the control algorithm can be managed through NTC, PTC or pressure probes.

Weekly Energy saving

- Three different time bands per day (only with RTC onboard)
- From digital input

Weekly ON/OFF:

- Three different time bands per day (only with RTC onboard)

Dynamic setpoint:

- Determined by analogue NTC input or 4÷20mA current input.

Change over :

- Automatic chiller or heat pump functioning depending from NTC analogue input.

Remote OFF:

- From configurable digital input.

Remote change over:

- From configurable digital input.

Hot start :

- Air / air unit

Defrost management:

- Combined control with temperature and pressure
- Forced defrost with low temperature of external air
- From configurable digital input
- Manual from keyboard

Boiler:

- For electrical integration heating or anti-freeze heaters

Two proportional outputs for condensing fan speed control (inverter or phase cut) with configurable signal:

- PWM
- 0÷10Volt
- 4÷20mA

Four proportional control outputs 0÷10V or ON/OFF

- To control the dumper in free cooling or recovery
- To control an external relay

Complete alarm management

- Internal Data logger up to 100 events

Supervisor / tele assistance/ monitoring

- TTL output for XJ485 interface (Mod #Bus protocol) for XWEB300 / XWEB3000 Dixell monitoring system for local and remote control

Up to 2 remote terminals with display read-out customizable

- With NTC ambient temperature probe

3 XC200 L TABLE OF THE FEATURES


FEATURES	XC260L	XC261L
	CHILLER WITH HEAT PUMP	
FRONTPANEL KEY BUTTONS		
6	●	●
OUTPUT RELAYS		
10	●	
14		●
DIGITAL INPUTS		
18	configurable	configurable
PROBE INPUTS		
10 NTC - PTC - 4÷20mA - 0 ÷ 5Volt	configurable	configurable
PROPORTIONAL OUTPUTS		
Two PWM outputs for condensing fan	●	●
Two 0÷10V o 4÷20mA for condensing fan	configurable	configurable
Four 0÷10V outputs for Free cooling and Heating recovery, or to drive an external relay	configurable	configurable
OTHER OUTPUTS		
TTL / RS – 485 with Mod-Bus-Rtu protocol	●	●
Output for remote keyboard VI620 (up to 2 boards together)	●	●
Output for remote keyboard VI820 (up to 2 boards together)		
POWER SUPPLY		
12 Vac/dc (+15%;-10%)	●	●
24 Vac/dc (± 10%)	opt	opt
TOP DISPLAY		
± 3 led with decimal point	●	●
BOTTOM DISPLAY		
± 4 led with decimal point	●	●
OTHERS		
Internal RTC	opt	opt
Buzzer	opt	opt

- configurable = configurable through parameter
- opt = optional
- ● = default


4 USER INTERFACE

4.1 FUNCTION OF THE LEDs OF THE KEY BUTTONS



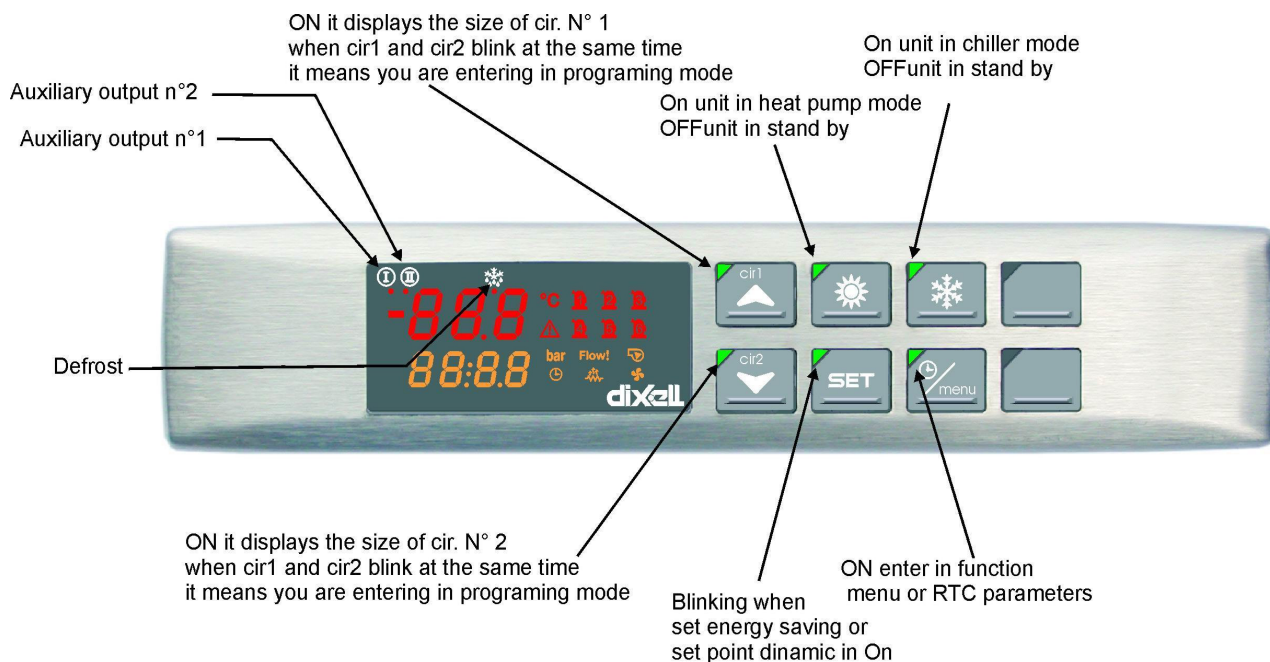



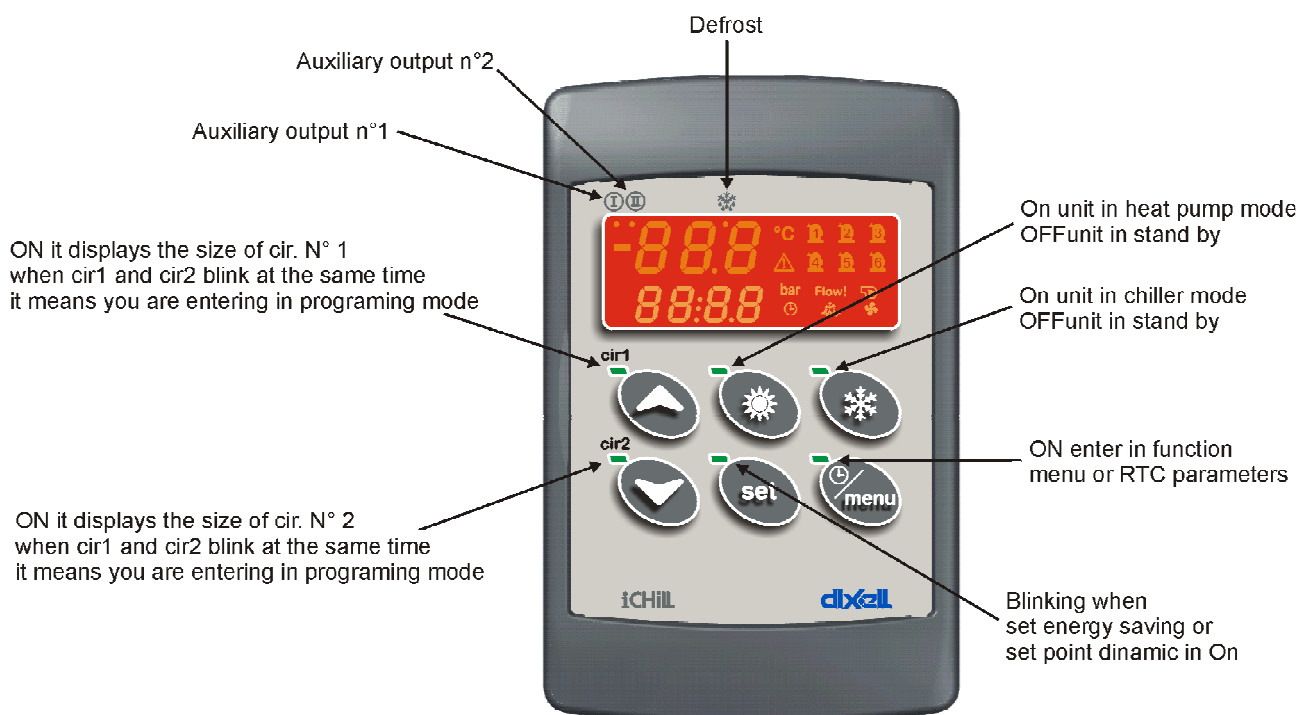

Use of the led on the XC260L / XC261L metal models




4.2 USE OF THE LED ON THE MODELS VI620 - VI620S REMOTE PANELS





4.3 KEY FUNCTION




KEY	ACTION	FUNCTION
	Push and release	Show chiller set point SetC and heat pump SetH
	Push once	In chiller or heat pump if the Energy saving or the Dynamic setpoint are enabled it shows the real setpoint Setr , the led is blinking.
	Push for 3 seconds the release	Change between chiller / heat pump
	During the programming: push one time	Select a parameter or confirm a value
	Push once with probe label showed on the bottom display	Change between the read-out of the circuit 1 and the circuit 2 and viceversa
 UP KEY	Push once	Select the readings of the first circuit
	Pushing once during the programming	To change the parameter code or value
	Push for 1 second during the programming	1 time shows the Pr2 programming level 2 time shows the Pr3 programming level
 TASTO DOWN	Push once	Select the readings of the second circuit
	Pushing one time during the programming	To change the parameter code or value
	Push once	Turn the chiller on, if the unit is on led is on The led is blinking if there is a power on delay or during the pump down
	Push once	Turn the heat pump on, if the unit is on led is on The led is blinking if there is a power on delay or during the pump down
	Push once	enter the function Menu
	Push for 3 seconds	To set RTC parameters (if the RTC is inside)
	Pushing once during the programming	To exit from a group of parameter
	Push once	Start the heating recovery of the chiller unit, with recovery active the led is on
	Push once	Start the free cooling of chiller unit, with free cooling active the led is on

4.4 KEY COMBINANTION

















KEY	ACTION	FUNCTION
	Push for 3 seconds together	Enter the programming

	In Pr3 level: push SET and the push DOWN key	Select the parameter level visibility Pr1 / Pr2 / Pr3
	Push once together	Exit the programming
	Push 5 seconds (heat pump with ok condition)	Manual defrost
	In Pr3 programming level Push SET and then the MENU key	In Pr3 defines if the parameter can be changed or not in the other levels.


4.5 LED AND ICONS

ICON	LED	FUNCTION
	ON	Auxiliary relay #1 active
	OFF	Auxiliary relay #1 not active
	ON	Auxiliary relay #2 active
	OFF	Auxiliary relay #2 not active
	BLINKING	Defrost delay counting active
	ON	Defrost
	OFF	Defrost end

4.6 DISPLAY AND ICONS

ICON	MEANING / FUNCTIONNING
	Celsius degrees: ON for temperature measurements of probe values or parameters
	Fahrenheit degrees: ON for temperature measurements of probe values or parameters
	Bar: ON for pressure measurements of probe values, setpoint or parameters
	Psi: ON for pressure measurements of probe values, setpoint or parameters
	ON = compressor 1 active Blinking = compressor 1 delay counting
	ON = compressor 2 active Blinking = compressor 2 delay counting
	ON = compressor 3 active Blinking = compressor 3 delay counting
	ON = compressor 4 active Blinking = compressor 4 delay counting
	ON = compressor 5 active Blinking = compressor 5 delay counting
	ON = compressor 6 active Blinking = compressor 6 delay counting
	General alarm: blinking if there is an alarm not identified by an icon
	Anti freeze heaters/ integration heating / boiler: ON if the output is on
	Flow alarm/ (differential) pressure switch / supply fan thermal (air / air unit) : is blinking if the configuration of the digital input is active
	Real time clock: On when the bottom display show the RTC ON during the programming with time based parameter value In function menu indicates the defrost delay counting
	Water pump: On if at least one of the four configurable pump group is on
	Condenser fan: ON if at least one of the PWM or relay outputs for fan control is active

4.7 MEANING/ FUNCTIONNING OF THE BOTTOM DISPLAY LED

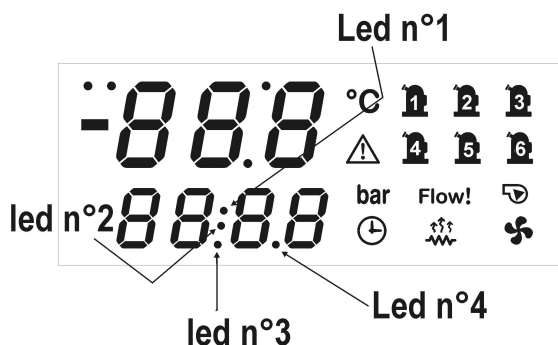

Led # 1 – 2 (With RTC)

If the bottom display shows the RTC the 1 and 2 leds are blinking.

Led # 1 – 2 In function Menu

During the time counting to the next defrost for one or both circuits the led 1 and 2 are blinking.

LED Parameter programming

In Pr2 level: led #3 indicates the visibility while the #1 and #2 show if the parameter can be modified or not.

In Pr3 level: led #3 and #4 indicate the visibility while the #1 and #2 show if the parameter can be modified or not.

5 REMOTE TERMINAL

The XC200L can be connected with 2 remote terminals. Each remote terminal can have the NTC probe on board that is used to show the local temperature and also to control the

temperature regulation. For the connections use shielded cable for a maximum length of 150mt. In case of no

6 FIRST INSTALLING

6.1 ON BOARD CLOCK (OPTIONAL)

Giving power supply the bottom display shows "rtc" alternated with a temperature or pressure value: **It is necessary to set the RTC.**

If the probes are not connected the display shows the corresponding probe alarm messages. In this situation the RTC setup and the programming are available.

ATTENTION

The RTC function is an optional and it is not possible to update the instrument but it is necessary to order the instrument already complete of this features.

With power failure the RTC back-up battery maximum duration is 1 week. After this period it is necessary to setup the clock again.


6.2 RTC SETUP

1. Push **M** key for 3 seconds until the bottom display shows "Hour" and the top display shows its value.
2. Push **SET** one time: the value is blinking.
3. Use the Up and Down keys to adjust it. Push **SET** one time to confirm; automatically the display shows next parameter.
4. Repeat the operations 2. 3. and 4. for all the RTC parameters:
 - **Min**: minutes (0÷60)
 - **UdAy**: day of the week (**Sun** = Sunday, **Mon** =Monday, **tuE** =Tuesday, **UEd** = Wednesday, **tHu** = Thursday, **Fri** =Friday, **SAt** =Saturday)
 - **dAy**: day of the month (0÷31)
 - **MntH**: month (1÷12)
 - **yEA**: year (00÷99)

7 WIRING CONNECTIONS


7.1 HARDWARE RESOURCES FOR XC260L

10 digital outputs (relays)
 18 digital inputs (free of voltage)
 10 analogue inputs: NTC probes or through configuration 6 NTC / PTC and 4 pressure transducer 4÷20mA or ratio-metric 0÷ 5.0Volt
 6 modulating outputs
 1 output for remote panel (max 2 remote panels)
 1 TTL output for "Hot Key 64" connection or for XJ485, interface module for monitoring system, connection.
 MAX current on the relay contacts relè 5(2)A 250V - MAX common current 12A 250V

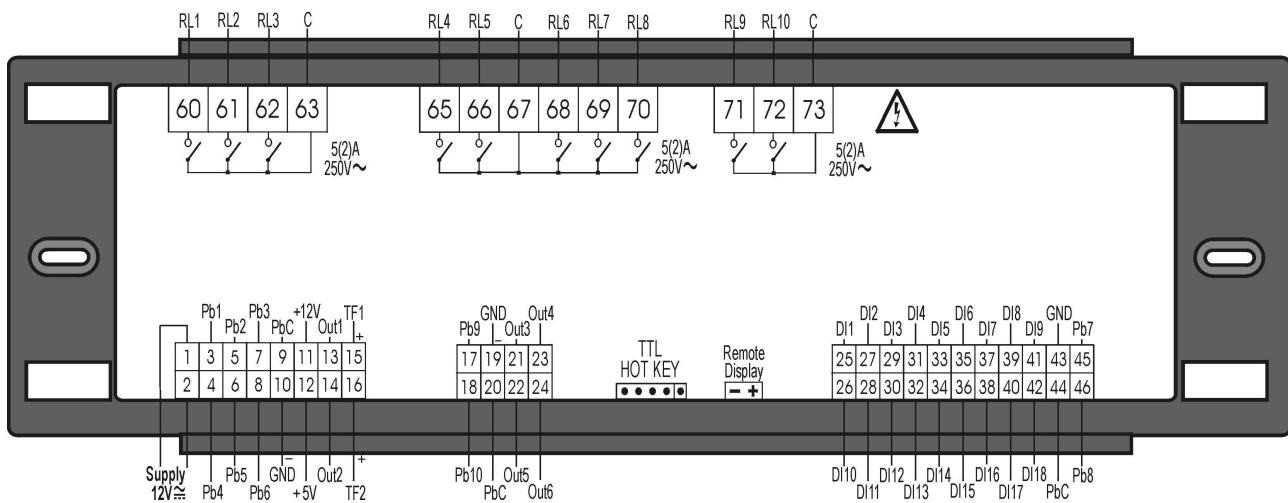


7.2 HARDWARE RESOURCES FOR XC261L

14 digital outputs (relays)
 18 digital inputs (free of voltage)
 10 analogue inputs: NTC probes or through configuration 6 NTC / PTC and 4 pressure transducer 4÷20mA or ratio-metric 0÷ 5.0Volt
 6 modulating outputs
 1 output for remote panel (max 2 remote panels)
 1 TTL output for "Hot Key 64" connection or for XJ485, interface module for monitoring system, connection.
 MAX current on the relay contacts relè 5(2)A 250V - MAX common current 12A 250V

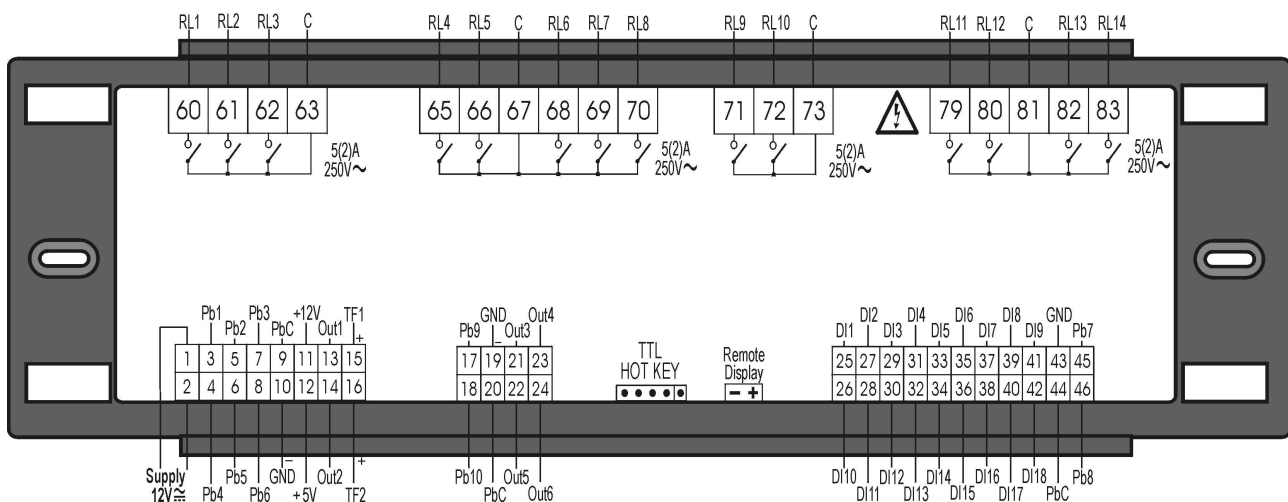

7.3 REMOTE PANELS VI620

The instrument receives up to two remote panels. Using the remote panels provided with the ambient NTC probe the display measurement, and the control can be managed directly by this probe. Use shielded cable for the connection up to 150mt maximum. In case of communication failure the upper display shows “**noL**” (no link). Use the CAB/CJ30 to interface the XC200L connector to the shielded cable.

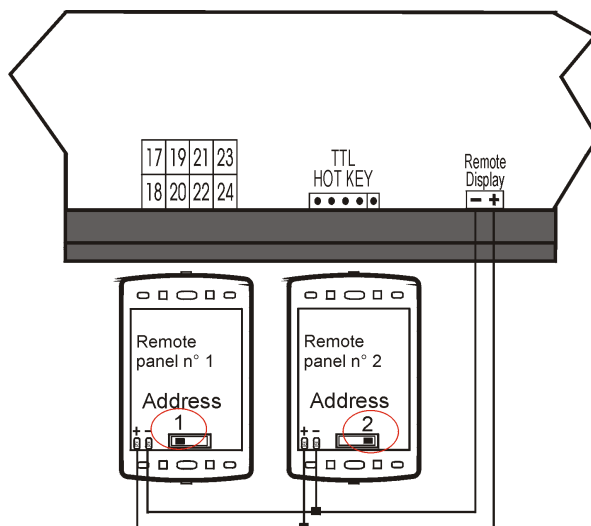

8 ANALOG AND DIGITAL OUTPUT CONFIGURATION

8.1 ANALOG INPUT PB1 - PB2 - PB7 - PB8 - PB9 - PB10

Parameters involved:

CF08 = Configuration PB1

CF09 = Configuration PB2

CF14 = Configuration PB7

CF15 = Configuration PB8

CF16 = Configuration PB9

CF17 = Configuration PB10

0. Not enabled
1. Temperature probe **PTC** for compressor #1 discharge
2. Temperature probe **PTC** for compressor #2 discharge
3. Temperature probe **PTC** for compressor #3 discharge
4. Temperature probe **PTC** for compressor #4 discharge
5. Temperature probe **PTC** for compressor #5 discharge
6. Temperature probe **PTC** for compressor #6 discharge
7. Temperature probe **NTC** for evaporator inlet
8. Temperature probe **NTC** for evaporator #1 outlet
9. Temperature probe **NTC** for evaporator #2 outlet
10. Temperature probe **NTC** for common evaporator outlet
11. Temperature probe **NTC** for common hot water condenser / recovery inlet
12. Temperature probe **NTC** for hot water of the condenser / recovery circuit #1 inlet
13. Temperature probe **NTC** for hot water of the condenser / recovery circuit #2 inlet
14. Temperature probe **NTC** for hot water of the condenser / recovery circuit #1 outlet
15. Temperature probe **NTC** for hot water of the condenser / recovery circuit #2 outlet
16. Temperature probe **NTC** for hot water of the condenser / recovery common outlet
17. Temperature probe **NTC** for free cooling water inlet circuit
18. Temperature probe **NTC** for free cooling external air temperature
19. Temperature probe **NTC** for dynamic setpoint external air / boiler / change over
20. Temperature probe **NTC** for combined defrost circuit #1
21. Temperature probe **NTC** for combined defrost circuit #2
22. Temperature probe **NTC** for auxiliary output #1
23. Temperature probe **NTC** for auxiliary output #2
24. Temperature probe **NTC** for condensing circuit #1
25. Temperature probe **NTC** for condensing circuit #22

After the number 25 the display configuration can be selected from **o 1** to **c62** that allows to set an analogue input as digital input (see polarity of the digital input/outputs).

8.2 ANALOG INPUT CONFIGURATION PB3 - PB4 - PB5 - PB6

Parameter involved:

CF10 = Configuration PB3

CF11 = Configuration PB4

CF12 = Configuration PB5

CF13 = Configuration PB6

0. Not enabled
1. Temperature probe **PTC** for compressor 1 discharge
2. Temperature probe **PTC** for compressor 2 discharge
3. Temperature probe **PTC** for compressor 3 discharge
4. Temperature probe **PTC** for compressor 4 discharge
5. Temperature probe **PTC** for compressor 5 discharge
6. Temperature probe **PTC** for compressor 6 discharge
7. Temperature probe **NTC** for evaporator inlet
8. Temperature probe **NTC** for evaporator outlet # 1
9. Temperature probe **NTC** for evaporator outlet # 2
10. Temperature probe **NTC** for common evaporator outlet
11. Temperature probe **NTC** for common hot water condenser / recovery inlet

12. Temperature probe **NTC** for hot water condenser / recovery inlet circuit #1
13. Temperature probe **NTC** for hot water condenser / recovery inlet circuit #2
14. Temperature probe **NTC** for hot water condenser / recovery outlet circuit #1
15. Temperature probe **NTC** for hot water condenser / recovery outlet circuit #2
16. Temperature probe **NTC** for hot water condenser / recovery common outlet circuit
17. Temperature probe **NTC** for free cooling water inlet
18. Temperature probe **NTC** for free cooling external air
19. Temperature probe **NTC** for external air dynamic setpoint/ boiler / change over
20. Temperature probe **NTC** for combined defrost circuit #1
21. Temperature probe **NTC** for free cooling water inlet #2
22. Temperature probe **NTC** for auxiliary output #1
23. Temperature probe **NTC** for auxiliary output #2
24. Condenser probe circuit 1 (temperature **NTC** / pressure **4÷20 mA** / ratio-metric **0÷ 5Volt**)
25. Condenser probe circuit 2 (temperature **NTC** / pressure **4÷20 mA** / ratio-metric **0÷ 5Volt**)
26. Evaporator pressure probe circuit 1 (pressure **4÷20 mA** / ratio-metric **0÷ 5Volt**)
27. Evaporator pressure probe circuit 1 (pressure **4÷20 mA** / ratio-metric **0÷ 5Volt**)
28. Auxiliary output 1 pressure probe control (**4÷20 mA** / ratio-metric **0÷ 5Volt**).
29. Auxiliary output 2 pressure probe control (**4÷20 mA** / ratio-metric **0÷ 5Volt**).
30. Dynamic setpoint pressure probe (**4÷20 mA**)

After the number 30 the display read-out goes from "**o 1**" to "**c62**" that allows to set an analogue input as digital input (see polarity input of digital inputs).

8.3 DIGITAL INPUT CONFIGURATION ID1 – ID18

Parameters involved:

CF36 = Configuration ID1...**CF53** = Configuration ID18

0. Not enabled
1. Remote ON / OFF
2. Remote chiller / heat pump
3. Flow switch/ Supply fan overload
4. Flow switch of heated side
5. Antifreeze heater circuit 1
6. Antifreeze heater circuit 2
7. High pressure switch circuit # 1
8. High pressure switch circuit 2
9. Low pressure switch circuit 1
10. Low pressure switch circuit 2
11. Compressor 1 high pressure
12. Compressor 2 high pressure
13. Compressor 3 high pressure
14. Compressor 4 high pressure
15. Compressor 5 high pressure
16. Compressor 6 high pressure
17. Compressor 1 overload
18. Compressor 2 overload
19. Compressor 3 overload
20. Compressor 4 overload
21. Compressor 5 overload
22. Compressor 6 overload
23. Condenser fan overload of circuit 1
24. Condenser fan overload of circuit 2
25. Condenser fan overload of circuit 1 and 2 (comun)
26. Water pump overload of evaporator 1
27. Water support pump overload of evaporator
28. Water pump overload of condenser 1
29. Water support pump overload of condenser
30. Recovery request for circuit 1
31. Recovery request for circuit 2
32. Defrost end of circuit 1
33. Defrost end of circuit 2
34. Energy Saving

35. Pressure switch / compressor 1 oil
36. Pressure switch / compressor 2 oil
37. Pressure switch / compressor 3 oil
38. Pressure switch / compressor 4 oil
39. Pressure switch / compressor 5 oil
40. Pressure switch / compressor 6 oil
41. Pump down pressure switch of circuit 1
42. Pump down pressure switch of circuit 2
43. Generic alarm from digital input with stop regulation n° 1
44. Generic alarm from digital input with stop or signal regulation n° 2
45. Digital input selection functioning with RTC or keyboard
46. Digital input functioning supply fan only
47. Digital input of thermoregulation request (motocondensing unit)
48. Digital input of cooling request (motocondensing unit)
49. Digital input of heating request (motocondensing unit)
50. Request step #2 (motocondensing unit)
51. Request step #3 (motocondensing unit)
52. Request step #4 (motocondensing unit)
53. Request step #5 motocondensing unit)
54. Request step #6 (motocondensing unit)
55. Request step #7 (motocondensing unit)
56. Request step #8 (motocondensing unit)
57. Request step #9 (motocondensing unit)
58. Request step #10 (motocondensing unit)
59. Request step #11 (motocondensing unit)
60. Request step #12 (motocondensing unit)
61. Request step #13 motocondensing unit)
62. Request step #14 (motocondensing unit)
63. Request step #15 (motocondensing unit)
64. Request step #16 (motocondensing unit)

8.4 DIGITAL OUTPUT (RELAY) CONFIGURATION RL1- RL14

Parameter involved:

CF54= Configuration RL1...**CF67=** Configuration RL14

0. Not enabled
1. Alarm
2. Evaporator water pump / Supply fan
3. Support water pump of the evaporator
4. Anti-freeze heater / integration heating / boiler circuit #1
5. Anti-freeze heater / integration heating / boiler circuit #2
6. Water pump of the condenser recovery circuit
7. Support water pump of the condenser recovery circuit
8. 4-way valve for chiller / heat pump inversion of the circuit #1
9. 4-way valve for chiller / heat pump inversion of the circuit #2
10. 1° condenser fan step ON/OFF control of the circuit #1
11. 2° condenser fan step ON/OFF control of the circuit #1
12. 3° condenser fan step ON/OFF control of the circuit #1
13. 4° condenser fan step ON/OFF control of the circuit #1
14. 1° condenser fan step ON/OFF control of the circuit #2
15. 2° condenser fan step ON/OFF control of the circuit #2
16. 3° condenser fan step ON/OFF control of the circuit #2
17. 4° condenser fan step ON/OFF control of the circuit #2
18. Solenoid valve of the pump-down circuit #1
19. Solenoid valve of the pump-down circuit #2
20. Recovery valve circuit #1
21. Recovery valve circuit #2
22. Free cooling ON/OFF valve
23. Auxiliary output circuit #1
24. Auxiliary output circuit #2
25. Solenoid valve Intermittent for screw compressor #1
26. Solenoid valve Intermittent for screw compressor #2
27. Solenoid valve of the liquid injection for compressor #1
28. Solenoid valve of the liquid injection for compressor #2
29. Direct start-up : compressor #1 relay
PW start: relay PW #1 of the compressor #1
Star-delta start: relay line #1 of the compressor #1
30. PW start: relay PW #2 of the compressor #1
Star-delta start: relay linea #2 compressor #1
31. Star centre of the Star-delta start of the compressor 1#
32. Capacity step valve #1 compressor #1

33. Capacity step valve #2 compressor #1
34. Capacity step valve #3 compressor #1
35. By-pass gas valve compressor #1 start
36. Direct start: compressor #2 start
PW start: relay #1 of the compressor #2
Star-delta start: relay line #1 of the compressor #2
37. PW start: relay PW #2 of the compressor #2
Star-delta start: relay line #2 of the compressor #2
38. Star centre of the Star-delta start of the compressor #2
39. Capacity step valve #1 compressor #2
40. Capacity step valve #2 compressor #2
41. Capacity step valve #3 compressor #2
42. By-pass gas valve compressor #2 start
43. Direct start: compressor #3 relay
PW start: relay PW #1 of the compressor #3
Star-delta start: relay line #1 of the compressor #3
44. PW start: relay PW #2 of the compressor #3
Star-delta start: relay line #1 of the compressor #3
45. Star centre of the Star-delta start of the compressor #3
46. Capacity step valve #1 compressor #3
47. Capacity step valve #2 compressor #3
48. Capacity step valve #3 compressor #3
49. By-pass gas valve compressor #3 start
50. Direct start: compressor #4 relay
PW start: PW#1 of the compressor #4
Star-delta start: relay line #1 of the compressor #4
51. PW start: relay PW #2 of the compressor #4
Star-delta start: relay line#1 of the compressor #4
52. Star centre of the Star-delta start of the compressor #4
53. Capacity step valve #1 of the compressor #4
54. Capacity step valve #2 of the compressor #4
55. Capacity step valve #3 of the compressor #4
56. By-pass gas valve compressor #4 start
57. Compressor #5 relay
58. Compressor #6 relay

8.5 CONDENSER PROPORTIONAL CONTROL CONFIGURATION (2 OUTPUTS)

Proportional outputs used to configure a proportional output signal to condenser fan control

Parameters involved:

CF68 = Condenser control configuration for circuit 1

CF69 = Condenser control configuration for circuit 2

0. 0 ÷ 10Vdc (for external mono or three-phase fan control board)
1. 4÷20mA (for external mono or three-phase fan control board)
2. PWM (only for external mono-phase fan control board with cut phase control)

8.6 PROPORTIONAL OUTPUT CONFIGURATION 0 ÷ 10 VDC (4 OUTPUTS)

Parameters involved:

CF70 = Proportional output 1 configuration

CF71 = Proportional output 2 configuration

CF72 = Proportional output 3 configuration

CF73 = Proportional output 4 configuration

- 0 Not enabled
- 1 Free cooling dumper / mixing valve
- 2 3-way valve for hot water
- 3 Dumper for air change
- 4 Auxiliary output 0÷10V n° 1
- 5 Auxiliary output 0÷10V n° 2
- 6 Proportional output for inverter circuit 1 compressor n° 2
- 7 Proportional output for inverter circuit 2 compressor n° 2

After the read-out number 4 the display goes from the label "o 1" to "c22" (see input/output polarity), that allow to configure the output as digital output to control an external relay.

9 TABLE OF THE PARAMETERS

MENU SELECTION

Label	Description
ALL	Shows all the parameters
ST	Shows only the Thermoregulation parameters
CF	Shows only the Configuration parameters
SD	Shows only the Dynamic Setpoint parameters
ES	Shows only the Energy Saving, RTC parameters
Cr	Shows only the compressor rack parameters
CO	Shows only the compressor parameters
US	Shows only the Auxiliary Output parameters
FA	Shows only the Fan Control parameters
Ar	Shows only the Antifreeze Control parameters
DF	Shows only the Defrost parameters
AL	Shows only the Alarm parameters

Thermoregulation

Parameter	Description	min	max	u.m.	Resolution
ST 1	Chiller Setpoint Allow to modify the setpoint of the unit in chiller mode	ST02	ST03	°C/°F	dec/int
ST 2	Chiller minimum Setpoint Minimum setpoint limit for ST 1	-30.0 -22	ST01	°C °F	dec/int
ST 3	Chiller maximum Setpoint Maximum setpoint limit for ST 1	ST01	70.0 158	°C °F	dec/int
ST 4	Heat pump setpoint Allow to modify the setpoint of the unit in heat pump mode	ST05	ST06	°C/°F	dec/int
ST 5	Heat pump minimum Setpoint Minimum setpoint limit for ST 4	-30.0 -22	ST04	°C °F	Dec int
ST 6	Heat pump maximum Setpoint Maximum setpoint limit for ST 4	ST04	70.0 158	°C °F	Dec int
ST 7	Regulation band in chiller mode	0.0 0	25.0 45	°C °F	Dec int
ST 8	Regulation band in chiller heat pump	0.0 0	25.0 45	°C °F	Dec int
ST 9	Thermoregulation probe selection in chiller 0= Temperature probe NTC for evaporator inlet 1= Temperature probe NTC for evaporator outlet 1 2= Temperature probe NTC for evaporator outlet 2 3= Temperature probe NTC for common evaporator outlet 4= Temperature NTC probe from remote panel 1 5= Temperature NTC probe from remote panel 2	0	5		
ST 10	Thermoregulation probe selection in heat pump 0= Temperature probe NTC for evaporator inlet 1= Temperature probe NTC for evaporator outlet 1 2= Temperature probe NTC for evaporator outlet 2 3= Temperature probe NTC for common evaporator outlet 4= Temperature NTC probe from remote panel 1 5= Temperature NTC probe from remote panel 2 6= Temperature probe for water common inlet of the condenser 7= Temperature probe for water inlet of the circuit # 1 condenser 8= Temperature probe for water inlet of the circuit # 2 condenser 9= Temperature probe for water outlet of the circuit # 1 condenser 10= Temperature probe for water outlet of the circuit # 2 condenser 11= Temperature probe for water common outlet of the condenser ATTENTION To have the same thermoregulation for chiller and heat pump mode, set the parameters ST09 and ST10 with the same value	0	11		
ST 11	Type of thermoregulation 0= Proportional 1= Neutral zone	0	1		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		

Display read-out

Parameter	Description	min	max	M. u.	Resolution
dP 1	Default read-out of the top display	0	14		
dP 2	Default read-out of the bottom display	0	17		
dP 3	Default display read-out configuration top / bottom 0= Configurable 1= Top display: Evaporator IN, Bottom display: Evaporator OUT 2= Top display: Condenser IN, Bottom display: Condenser OUT 3=Top display: temperature/Condensing pressure, Bottom Display: evaporating pressure	0	3		
Display read-out of the remote terminals					
dP4	Top display default read-out of the remote terminal _1 0= the read-out depends on the parameters dP01 – dP02 – dP03 1= the read-out shows the NTC probe of the remote panel.	0	1		
dP5	Top display default read-out of the remote terminal _2 0= the read-out depends on the parameters dP01 – dP02 – dP03 1= the read-out shows the NTC probe of the remote panel.	0	1		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Configuration					
Parameter	Description	min	max	M. u.	Resolution
Unit Model					
CF 1	Type of unit 0= Air / air Chiller 1= Air / water Chiller 2= Water / water Chiller	0	2		
CF 2	Selection type of unit 1= only chiller 2= only heat pump 3= chiller with heat pump	0	3		
CF 3	Motocondensing unit 0= no 1= si	0	1		
Compressors					
CF 4	Compressors number for circuit #1 1= 1 2= 2 3= 3 4= 4	0	4		
CF 5	Compressors number for circuit #2 0= 0 1= 1 2= 2 3= 3	0	3		
CF 6	Number of compressor partialization 0= none 1= 1 2= 2 3= 3	0	3		
Analog Inputs					
CF 7	Pressure or temperature analogue input functioning 0 = Temperature / pressure NTC – 4÷20 mA : The condensing temperature is controlled with NTC probe while for the evaporating pressures of the circuits 1 and 2 and the pressure probe configured as auxiliary output 1 and 2 are controlled with 4÷20mA transducers. 1 = Pressure control with 4÷20 mA: To control the evaporating and condensing pressures it is necessary a 4÷20mA transducer. 2 = Temperature / pressure NTC – 0÷5Vdc: The condensing temperature is controlled with NTC probe while for the evaporating pressures of the circuits 1 and 2 and the pressure probe configured as auxiliary output 1 and 2 are controlled with 0÷5Vdc transducers. 3 = Pressure control with 0÷5Vdc: To control the evaporating and condensing pressures it is necessary a ratiometric 0÷5Vdc transducer.	0	3		
CF 8	PB1 Configuration If configured as digital input	0 o 1	25 c64		
CF 9	PB2 Configuration If configured as digital input	0 o 1	25 c64		
CF 10	PB3 Configuration If configured as digital input	0 o 1	30 c64		
CF 11	PB4 Configuration If configured as digital input	0 o 1	30 c64		

CF 12	PB5 Configuration If configured as digital input	0 o 1	30 c64		
CF 13	PB6 Configuration If configured as digital input	0 o 1	30 c64		
CF 14	PB7 Configuration If configured as digital input	0 o 1	25 c64		
CF 15	PB8 Configuration If configured as digital input	0 o 1	25 c64		
CF 16	PB9 Configuration If configured as digital input	0 o 1	25 c64		
CF 17	PB10 Configuration If configured as digital input	0 o 1	25 c64		
Probe Offset					
CF 18	PB1 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 19	PB2 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 20	PB3 Offset	-12.0 -10 -5.0 -72	12.0 53 5.0 72	°C °F bar psi	Dec int dec int
CF 21	PB4 Offset	-12.0 -10 -5.0 -72	12.0 53 5.0 72	°C °F bar psi	Dec int dec int
CF 22	PB5 Offset	-12.0 -10 -5.0 -72	12.0 53 5.0 72	°C °F bar psi	Dec int dec int
CF 23	PB6 Offset	-12.0 -10 -5.0 -72	12.0 53 5.0 72	°C °F bar psi	Dec int dec int
CF 24	PB7 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 25	PB8 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 26	PB9 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 27	PB10 Offset	-12.0 -10	12.0 53	°C °F	Dec int
CF 28	Pressure value at 4mA or 0.5 Vdc of the PB3 transducer	0 0	50.0 725	Bar psi	Dec int
CF 29	Pressure value at 20mA or 5 Vdc of the PB3 transducer	0 0	50.0 725	Bar psi	Dec int
CF 30	Pressure value at 4mA or 0.5 Vdc of the PB4 transducer	0 0	50.0 725	Bar psi	Dec int
CF 31	Pressure value at 20mA or 5 Vdc of the PB4 transducer	0 0	50.0 725	Bar psi	Dec int
CF 32	Pressure value at 4mA or 0.5 Vdc of the PB5 transducer	0 0	50.0 725	Bar psi	Dec int
CF 33	Pressure value at 20mA or 5 Vdc of the PB5 transducer	0 0	50.0 725	Bar psi	Dec int
CF 34	Pressure value at 4mA or 0.5 Vdc of the PB6 transducer	0 0	50.0 725	Bar psi	Dec int
CF 35	Pressure value at 20mA or 5 Vdc of the PB6 transducer	0 0	50.0 725	Bar psi	Dec int
Digital Inputs					
CF 36	Configuration of ID1	0 -o1	c64		
CF 37	Configuration of ID2	0 -o1	c64		
CF 38	Configuration of ID3	0 -o1	c64		
CF 39	Configuration of ID4	0 -o1	c64		
CF 40	Configuration of ID5	0 -o1	c64		
CF 41	Configuration of ID6	0 -o1	c64		
CF 42	Configuration of ID7	0 -o1	c64		
CF 43	Configuration of ID8	0 -o1	c64		
CF 44	Configuration of ID9	0 -o1	c64		
CF 45	Configuration of ID10	0 -o1	c64		
CF 46	Configuration of ID11	0 -o1	c64		
CF 47	Configuration of ID12	0 -o1	c64		
CF 48	Configuration of ID13	0 -o1	c64		
CF 49	Configuration of ID14	0 -o1	c64		
CF 50	Configuration of ID15	0 -o1	c64		
CF 51	Configuration of ID16	0 -o1	c64		

CF 52	Configuration of ID17	0 -o1	c64		
CF 53	Configuration of ID18	0 -o1	c64		
Relay Outputs					
CF 54	Configuration of RL1	0 -o1	c58		
CF 55	Configuration of RL2	0 -o1	c58		
CF 56	Configuration of RL3	0 -o1	c58		
CF 57	Configuration of RL4	0 -o1	c58		
CF 58	Configuration of RL5	0 -o1	c58		
CF 59	Configuration of RL6	0 -o1	c58		
CF 60	Configuration of RL7	0 -o1	c58		
CF 61	Configuration of RL8	0 -o1	c58		
CF 62	Configuration of RL9	0 -o1	c58		
CF 63	Configuration of RL10	0 -o1	c58		
CF 64	Configuration of RL11	0 -o1	c58		
CF 65	Configuration of RL12	0 -o1	c58		
CF 66	Configuration of RL13	0 -o1	c58		
CF 67	Configuration of RL14	0 -o1	c58		
Condensing proportional outputs					
CF 68	Circuit 1 output signal: 0= 0 – 10Vdc 1= 4 ÷ 20mA 2= PWM for mono phase fan control board	0	2		
CF 69	Circuit 2 output signal: 0= 0 – 10V 1= 4 ÷ 20Ma 2= PWM for mono phase fan control board	0	2		
Proportional output					
CF 70	Proportional output 1 (out3) 0= Not enabled 1= Free cooling dumper / mixing valve 2= 3-way valve for hot water 3= Dumper for air change 4= Auxiliary output 0÷10V n° 1 5= Auxiliary output 0÷10V n° 2 6= Proportional output for inverter circuit 1 compressor n° 2 7= Proportional output for inverter circuit 2 compressor n° 2 Relay driver ON / OFF	0 o 1	7 c28		
CF 71	Proportional output 2 (out4) 0= Not enabled 1= Free cooling dumper / mixing valve 2= 3-way valve for hot water 3= Dumper for air change 4= Auxiliary output 0÷10V n° 1 5= Auxiliary output 0÷10V n° 2 6= Proportional output for inverter circuit 1 compressor n° 2 7= Proportional output for inverter circuit 2 compressor n° 2 Relay driver ON / OFF	0 o 1	7 c28		
CF 72	Proportional output 3 (out5) 0= Not enabled 1= Free cooling dumper / mixing valve 2= 3-way valve for hot water 3= Dumper for air change 4= Auxiliary output 0÷10V n° 1 5= Auxiliary output 0÷10V n° 2 6= Proportional output for inverter circuit 1 compressor n° 2 7= Proportional output for inverter circuit 2 compressor n° 2 Relay driver ON / OFF	0 o 1	7 c28		
CF 73	Proportional output 4 (out6) 0= Not enabled 1= Free cooling dumper / mixing valve 2= 3-way valve for hot water 3= Dumper for air change 4= Auxiliary output 0÷10V n° 1 5= Auxiliary output 0÷10V n° 2 6= Proportional output for inverter circuit 1 compressor n° 2 7= Proportional output for inverter circuit 2 compressor n° 2 Relay driver ON / OFF	0 o 1	7 c28		
Remote keyboard					
CF 74	Remote Panel 1 configuration 0= Not enabled 1= with NTC ambient temperature sensor 2= without NTC ambient temperature sensor	0	2		

CF 75	Remote Panel 2 configuration 0= Not enabled 1= with NTC ambient temperature sensor 2= without NTC ambient temperature sensor	0	2		
CF 76	Offset of the NTC probe of the remote terminal # 1	-12.0 -10	12.0 53	°C °F	Dec int
CF 77	Offset of the NTC probe of the remote terminal # 2	-12.0 -10	12.0 53	°C °F	Dec int
Icon function					
CF 78	Icon function 0= ❄️ chiller / 🔥 heat pump 1= 🔥 chiller / ❄️ heat pump	0	1		
Chiller / heat pump selection mode					
CF 79	0= from keyboard 1= from digital input 2= from analogue input	0	2		
Automatic Change over					
CF 80	Change over setpoint for chiller/ heat pump inversion if Par. CF79=2	-30.0 -22	70.0 158	°C °F	Dec int
CF 81	Change over temperature differential if Par. CF79=2	0 0	25.0 45	°C °F	Dec int
Unit of measurement					
CF 82	°C or °F selection 0= °C / °BAR 1= °F / °psi	0	1		
Voltage frequency					
CF 83	Power supply frequency 0= 50 Hz 1= 60 Hz 2= cc voltage (ATTENTION with Par. CF83 = 2 the proportional outputs for fan control are not enabled and the frequency alarm is inhibited)	0	2		
Serial Address					
CF 84	Serial address	1	247		
CF 85	Firmware Release				
CF 86	Eeprom parameter map				
Termoregulation of unbalanced compressors (different power)					
CF 87	Compressor 1 capacity	0	100%		
CF 88	Compressor 2 capacity	0	100%		
CF 89	Compressor 3 capacity	0	100%		
CF 90	Compressor 4 capacity	0	100%		
CF 91	Compressor 5 capacity	0	100%		
CF 92	Compressor 6 capacity	0	100%		
CF 93	Maximum n° start for hour compressor 0= Not enabled	0	15		
Mode compressors functioning					
CF 94	Selection working compressor 0 = chiller and heat pump 1 = only chiller 2 = only heat pump	0	2		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Dynamic Setpoint					
Parameters	Description	min	max	M. u.	Resolution
Sd 1	Maximum dynamic Offset in chiller mode	-30.0 -54	30.0 54	°C °F	Dec int
Sd 2	Maximum dynamic Offset in heat pump mode	-30.0 -54	30.0 54	°C °F	Dec int
Sd 3	External air setpoint in chiller mode	-30.0 -22	70.0 158	°C °F	Dec int
Sd 4	External air setpoint in heat pump mode	-30 -22	70.0 158	°C °F	Dec int
Sd 5	External air differential in chiller mode	-30.0 -54	30.0 54	°C °F	Dec int
Sd 6	External air differential in heat pump mode	-30.0 -54	30.0 54	°C °F	Dec int
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Energy saving					

Parameters	Description	min	max	udm	Risoluzione
ES 1	Start of the Time band 1 (0÷24)	0	24.00	Hr	10 Min
ES 2	End of the Time Band 1 (0÷24)	0	24.00	Hr	10 Min
ES 3	Start of the Time band 2 (0÷24)	0	24.00	Hr	10 Min
ES 4	End of the Time Band 2 (0÷24)	0	24.00	Hr	10 Min
ES 5	Start of the Time band 3 (0÷24)	0	24.00	Hr	10 Min
ES 6	End of the Time Band 3 (0÷24)	0	24.00	Hr	10 Min
ES 7	Monday: energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 8	Tuesday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 9	Wednesday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 10	Thursday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 11	Friday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 12	Saturday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 13	Sunday energy saving activated Automatic unit on-off	0 - 0	7 - 7		
ES 14	Energy Saving setpoint offset in chiller mode	-30.0 -54	30.0 54	°C °F	Dec int
ES 15	Energy Saving differential in chiller mode	0.0 0	25.0 45	°C °F	Dec int
ES 16	Energy Saving setpoint offset in heat pump mode	-30.0 -54	30.0 54	°C °F	Dec int
ES 17	Energy Saving differential in heat pump mode	0.0 0	25.0 45	°C °F	Dec int
ES 18	Unit in OFF by RTC maximum time of functioning unit On from Key board 0= Not enabled	0	250	Min	10 Min
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Compressors rack					
Cr1	Type of functioning compressor rack 0= Not enabled 1= regulation by ST09 probe 2 = regulation by pressure probe (Evaporator pressure probe)	0	2		
Cr2	Set point compressor suction probe	Cr03	Cr04	Bar Psi	Dec int
Cr3	Minimum set point compressor suction probe	0	Cr03	Bar Psi	Dec int
Cr4	Maximum set point compressor suction probe	Cr03	50 725	Bar Psi	Dec int
Cr5	Regulation band suction probe	0.1 1	14.0 203	Bar Psi	Dec int
Cr6	Set energy saving compressor rack	0.0 0	50.0 725	Bar psi	Dec int
Cr7	Differential energy saving compressor rack	0.1 1	14.0 203	Bar Psi	Dec int
Cr8	N° compressors in ON with failure probe 0 ÷ 6	0	6		
Cr9	Step of ventilation in On with failure probe 0 ÷ 4	0	4		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Compressors					
Parameters	Description	min	max	udm	Risoluzione
CO 1	Minimum compressor ON time after the start-up.	0	250	10 sec	10 sec
CO 2	Minimum compressor OFF time after the switching off.	0	250	10 sec	10 sec
CO 3	ON delay time between two compressors or compressor and valve. During this time the led of the next resource is blinking.	1	250	Sec	
CO 4	OFF delay time between two compressors or compressor and valve. During this time the led of the next resource is blinking.	0	250	Sec	
CO 5	Output time delay after the main power supply start-up to the unit. All the loads are delayed in case of frequently power failures.	0	250	10 Sec	10 sec
Partialization (Capacity Control)					

CO 6	Functioning (see Capacity Control) 0= With on/off steps 1= Continuous with steps and direct action 2= Continuous with steps and reverse action 3= Continuous with steps and direct total action	0	3		
CO 7	Start-up with minimum compressor power / automatic start-unloading valve 0 = Only at the compressor start-up (Minimum power automatic start-unloading valve off) 1= At the compressor start-up and during the thermoregulation (Minimum power / automatic start-unloading valve off) 2 = Only at the screw compressor start-up (Minimum power automatic start-unloading valve off) 3= At the compressor start-up and during the thermoregulation (Minimum power / Unloading valve ON with compressor off)	0	3		
CO 8	Relay ON time of the Solenoid valve Intermittent for screw compressor, with 0 the function is not enabled.	0	250	Sec	
CO 9	Relay OFF time of the Solenoid valve Intermittent for screw compressor	0	250	Sec	
Compressor start-up					
CO 10	Kind of compressor start-up 0= Direct (vedi avviamento compressors) 1= Part - winding 2= Star-delta	0	2		
CO 11	If CO10= 1 part - winding start-up time. To change the time delay between the two contactors of the two compressor circuits. Se CO10= 2 Star-delta start-up time. To change the time delay between the contactor of the line 1 and the contactor of the centre of the star. (see part – winding /start-triangle functioning)	0	100	Dec. di Sec	0.1 sec
CO 12	If CO10= 2 Time of Star-delta start. Time delay to turn off the centre star contactor and to turn on the line 2 contactor (see Star-delta functioning)	0	50	Dec. di Sec	0.1 sec
CO 13	By-pass gas valve start-up time / automatic start-unloading valve (capacity step control)	0	250	sec	
Rotating – Balancing – Compressors Thermoregulation					
CO 14	Compressor rotation (See compressor rotation) 0 = Sequential 1 = Compressors rotation based on time running hours 2 = Compressors rotation based on number of starts-up	0	2		
CO 15	Circuit balancing (See Circuit balancing) 0= Circuit saturation 1= Circuit balancing	0	1		
Evaporator water pump					
CO 16	Operative mode of the evaporator pump / supply fan (See Evaporator pump function) 0= Not enabled (evaporator pump or supply fan). 1= Continuous. When the unit is running in Chiller or HP the pump or the supply fan is running. 2= With compressor. When a compressor is running also the pump or the supply fan is running.	0	2		
CO 17	ON compressor delay after water pump / supply fan start-up (See water pump functioning).	1	250	Min	
CO 18	OFF delay evaporator water pump / supply fan after compressor switching OFF. This delay is also active when the unit is turned in stand-by (See evaporator water pump function).	0	250	Min	
CO 19	Number of time running hours for pump rotation (See water pump group function)	0	999	10Hr	10Hr
CO 20	Time to make run the pumps together before rotating from one to the other (See water pump group function)	0	250	Sec	
Condenser water pump					
CO 21	Operative mode for condenser water pump (See condenser water pump function) 0= Not enabled. 1= Continuous. When the unit is running in Chiller or HP the is running. 2= With compressor. When a compressor is running also the pump is running.	0	2		
CO 22	Free				
CO 23	OFF delay condenser water pump after compressor switching OFF. This delay is also active when the unit is turned in stand-by (See evaporator water pump function).	0	250	Min	
CO 24	Number of time running hours for pump rotation (See water pump group function).	0	999	10Hr	10Hr
CO 25	Time to make run the pumps together before rotating from one to the other (See water pump group function).	0	250	Sec	
Load maintenance					
CO 26	Compressor 1 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 27	Compressor 2 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 28	Compressor 3 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr

CO 29	Compressor 4 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 30	Compressor 5 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 31	Compressor 6 hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 32	"Evaporator pump / Supply fan" hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 33	2 nd Evaporator pump hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 34	Condenser pump hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
CO 35	2 nd Condenser pump hour counter set (See maintenance request)	0	999	10 Hr	10 Hr
Pump down					
CO 36	Pump down operating mode (See pump down ON/OFF function) 0= Not enabled 1= Unit off with pump-down, unit on without pump-down 2= Unit off with pump-down, unit on with pump-down 3= Chiller mode off with pump-down, chiller mode on without pump-down 4= Chiller mode off with pump-down, chiller mode on with pump-down	0	4		
CO 37	Pump-down pressure setpoint (See pump down ON/OFF function)	0 0	50.0 725	Bar psi	Dec int
CO 38	Pump-down pressure differential (See pump down ON/OFF function)	0 0	14.0 203	Bar psi	Dec int
CO 39	Maximum pump-down time duration at start-up and stop (See pump down ON/OFF function)	0	250	Sec	
Evaporator Unloading					
CO 40	Unloading compressor setpoint in chiller. From high temperature of the evaporator water inlet (See unloading function).	-30 0	70.0 725	°C °F	Dec int
CO 41	Unloading Differential. From high temperature of the evaporator water inlet (See unloading function).	0.0 0	25.0 45	°C °F	Dec int
CO 42	Delay time to engage the Unloading function from high temperature of the evaporator water inlet (See unloading function).	0	250	Sec	10sec
CO 43	Maximum unloading duration time to keep activated the Unloading function from high temperature of the evaporator water inlet (See unloading function).	0	250	Min	
Condenser Unloading					
CO 44	Unloading compressor setpoint. From temperature / pressure in chiller mode (See unloading function).	0 0	50.0 725	Bar psi	Dec int
CO 45	Unloading Differential. From temperature / pressure in chiller mode (See unloading function).	0.0 0	14.0 203	Bar Psi	Dec int
CO 46	Unloading compressor setpoint. From temperature / pressure in HP mode (See unloading function).	0 0	50.0 725	Bar psi	Dec int
CO 47	Unloading Differential. From temperature / pressure in HP mode (See unloading function).	0.0 0	14.0 203	Bar Psi	Dec int
CO 48	Maximum unloading duration time from temperature/pressure control.	0	250	Min	
CO 49	Number of steps for circuit with active unloading 1= 1 st step 2= 2 nd step 3= 3 rd step	1	3		
CO 50	Minimum ON time of the capacity step after the unloading function start (only for capacity compressor)	0	250	Sec	
Compressor liquid injection					
CO 51	Setpoint of the solenoid valve (on) of the liquid injection	0 0	150 302	°C °F	Dec / int int
CO 52	Setpoint of the solenoid valve (off) of the liquid injection	0.0 0	25.0 45	°C °F	Dec int
Management resource in neutral zone					
CO 53	Maximum time of work in neutral zone without insert resource	0	250	Min	10 Min
CO 54	Maximum time of work in neutral zone without rotation resource	0	999	Hr	1Hr
Evaporator low water temperature Unloading					
CO 55	Set point unloading compressor from low evaporator water temperature	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
CO 56	Differential unloading compressor from low evaporator water temperature	0.1 0 0.1 1	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
CO 57	Maximum unloading duration time from low evaporator water temperature	0	250	Min	
Pump down to time					
CO 58	maximum time pump-down in stopped CO58 = 0 Not enabled	0	250	Sec	
CO 59	maximum time pump-down in started CO59 = 0 Not enabled	0	250	Sec	
Compressor with inverter					
CO 60	Maximum time start up compressor digital scroll	0	250	sec	

CO 61	Minimum value proportional output from stat up compressor	0	100	%	
CO 62	Minimum time capacity variation from start up compressor digital scroll	1	250	sec	
CO 63	Minimum percentage continuative of work of the compressor digital scroll before to start counting CO64 time	0	100	%	
CO 64	Maximum time continuative of work of the compressor with percentage less of CO63	0	250	Min	10 Min
CO 65	Time of forcing the compressor digital scroll to the maximum power	0	250	sec	10sec
CO 66	Maximum time continuative of work of the digital scroll compressor	0	999	Hr	1Hr
CO 67	Minimum value proportional output digital scroll 0÷10V compressor 1	0	CO65	%	
CO 68	Maximum value proportional output digital scroll 0÷10V compressor 1	CO64	100	%	
CO 69	Minimum value proportional output digital scroll 0÷10V compressor 2	0	CO67	%	
CO 70	Maximum value proportional output digital scroll 0÷10V compressor 2	CO66	100	%	
CO 71	Minimum time capacity variation compressor digital scroll	1	250	sec	
Tandem function					
CO 72	Maximum time continuative of work single Tandem compressor	0	250	Min	
Tandem function					
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Auxiliary relay menu function					
Parameters	Description	min	max	M. U.	Resolution
Auxiliary relay of the circuit 1					
US 1	Auxiliary relay 1 operating mode (See graph and auxiliary relay functions) 0= Not enabled 1= Always available with direct action 2= Available only when the unit is on with direct action 3= Always available with reverse action 4= Available only when the unit is on with reverse action	0	4		
US 2	Analog input configuration for auxiliary relay 1 control. Allows to select which probe value Pb1..Pb10 controls the relay	1	10		
US 3	Auxiliary setpoint 1 (See graph and auxiliary relay functions)	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
US 4	Auxiliary differential 1 (See graph and auxiliary relay functions)	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
Auxiliary relay circuit 2					
US 5	Auxiliary relay 2 operating mode (See graph and auxiliary relay functions) 0= Not enabled 1= Always available with direct action 2= Available only when the unit is on with direct action 3= Always available with reverse action 4= Available only when the unit is on with reverse action	0	4		
US 6	Analog input configuration for auxiliary relay 2 control . Allows to select which probe value Pb1..Pb10 controls the relay	1	10		
US 7	Auxiliary setpoint 2 (See graph and auxiliary relay functions)	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
US 8	Auxiliary differential 1 (See graph and auxiliary relay functions)	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
Auxiliary proportional output n° 1					
US 9	Auxiliary proportional output n° 1 operating mode 0= Not enabled 1= Always available with direct action 2= Available only when the unit is on with direct action 3= Always available with reverse action 4= Available only when the unit is on with reverse action	0	4		
US 10	Analog input configuration for auxiliary control 1 Allows to select which probe value Pb1..Pb10 controls output	1	10		

US 11	Auxiliary setpoint proportional output 1	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
US 12	Differenzial proportional output 1	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
US 13	Minimum value proportional output 1	0	US14	%	
US 14	Maximum value proportional output 1	US13	100	%	
Auxiliary proportional output n° 2					
US 15	Auxiliary proportional output n° 2 operating mode 0= Not enabled 1= Always available with direct action 2= Available only when the unit is on with direct action 3= Always available with reverse action 4= Available only when the unit is on with reverse action	0	4		
US 16	Analogue input configuration for auxiliary 2 control Allows to select which probe value Pb1..Pb10 controls output	1	10		
US 17	Auxiliary setpoint proportional output 2	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
US 18	Differenzial proportional output 2	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
US 19	Minimum value proportional output 2	0	US20	%	
US 20	Maximum value proportional output 2	US19	100	%	
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Condenser fan					
Parameters	Description	min	max	M. U.	Resolution
FA 1	Fan configuration output 0 = Not enabled 1 = Always on 2 = ON/OFF regulation with steps 3 = ON/OFF Continuous regulation 4 = Proportional speed control	0	4		
FA 2	Fan operating mode 0= Dependent from the compressor 1= Independent from the compressor	0	1		
FA 3	If the condenser fan control is the triac output, when the regulation starts the trigger output will drive the condenser fan at the maximum voltage for the time FA 3 then, then the regulation will follow the temperature/pressure of the probe.	0	250	Sec	
FA 4	Phase shifting of the fan motor	0	8	Micro Sec	250µs
FA 5	Number of condensing circuits 0= one condenser circuit 1= tow condenser circuits	0	1		
FA 6	Pre-ventilation time before turning on the compressor in chiller mode. To turn on the fan at the maximum speed before the compressor and reduce the successive condensing temperature/pressure increasing. (only if FA01=4)	0	250	Sec	
Fan in Chiller mode					
FA 7	Minimum speed for condenser fan in Chiller mode. To set the minimum fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
FA 8	Maximum speed for condenser fan in Chiller mode. To set the maximim fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
FA 9	Proportional speed control FA01 = 4 Temperature or pressure limit to enable the minimum speed FA 7 ON/OFF regulation FA01 = 2/3 SETpoint step n° 1	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
FA 10	Proportional speed control FA01 = 4 Temperature or pressure limit to enable the maximum speed FA 8 ON/OFF regulation FA01 = 2/3 SETpoint step n° 2	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int

FA 11	Proportional speed control FA01 = 4 Proportional band for condenser fan control in chiller To set the temperature/pressure differential between the minimum and the maximum of the fan speed regulation. ON/OFF regulation FA01 = 2/3 Differential step circuit n° 1	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 12	Proportional speed control FA01 = 4 CUT-OFF differential in chiller. To set a temperature/pressure differential to stop the fan. ON/OFF regulation FA01 = 2/3 Differential step circuit n° 2	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 13	Over ride CUT- OFF in chiller. To set a temperature/pressure differential to keep the minimum fan speed.	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 14	CUT-OFF time delay. To set a time delay before activating the CUT-OFF function after the fan start-up. If after the compressor start-up the proportional regulator requires to turn off the fan (cut-off) and FA14≠0, the fan is on at the minimum speed for the time set in this parameter. If FA14=0 the function is disabled.	0	250	Sec	
FA 15	Night speed in chiller. To set the maximum fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
Fan in Heat pump mode					
FA 16	Minimum speed for condenser fan in Heat Pump mode. To set the minimum fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
FA 17	Maximum speed for condenser fan in Heat Pump mode. To set the maximum fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
FA 18	Proportional speed control FA01 = 4 Temperature or pressure limit to enable the minimum speed FA16 ON/OFF regulation FA01 = 2/3 SETpoint step n° 1	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
FA 19	Proportional speed control FA01 = 4 Temperature or pressure limit to enable the maximum speed FA17 ON/OFF regulation FA01 = 2/3 SETpoint step n° 2	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
FA 20	Proportional speed control FA01 = 4 Proportional band for condenser fan control in heat pump To set the temperature/pressure differential between the minimum and the maximum of the fan speed regulation. ON/OFF regulation FA01 = 2/3 Differential step circuit n° 1	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 21	Proportional speed control FA01 = 4 CUT-OFF differential in heat pump. To set a temperature/pressure differential to stop the fan. ON/OFF regulation FA01 = 2/3 Differential step circuit n° 2	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 22	Over ride CUT- OFF in Heat pump. To set a temperature/pressure differential to keep the minimum fan speed.	0.0 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
FA 23	Night speed in Heat pump. To set the maximum fan speed percentage value (30..100%), it is related to the fan power supply.	30	100	%	
Hot start					
FA 24	Hot start setpoint	-30.0 -22	70.0 158	°C °F	Dec int
FA 25	Hot start differential	0.0 0	25.0 45	°C °F	Dec int
3 / 4 step condenser Fan in Chiller mode					
FA 26	ON/OFF regulation FA01 = 2/3 SETpoint step n° 3	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
FA 27	ON/OFF regulation FA01 = 2/3 SETpoint step n° 4	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
3 / 4 step condenser Fan in heat pump					
FA 28	ON/OFF regulation FA01 = 2/3 SETpoint step n° 3	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int

FA 29	ON/OFF regulation FA01 = 2/3 SETpoint step n° 4	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Antifreeze heaters – Integration heating - boiler					
Parameter	Description	min	max	m. u.	Risoluzione
Ar 1	Anti-freeze heaters/integration heating setpoint for air/air unit in Chiller mode. To set a temperature value, below this value the anti-freeze relay is activated.	-30.0 -22	70.0 158	°C °F	Dec int
Ar 2	Regulation band for antifreeze in Chiller mode.	0.1 0	25.0 45	°C °F	Dec Int
Ar 3	Set Anti-freeze heaters/integration heating setpoint for air/air unit in HP mode. To set a temperature value, below this value the anti-freeze relay is activated.	-30.0 -22	70.0 158	°C °F	Dec int
Ar 4	Regulation band for antifreeze in HP mode.	-30.0 -22	70.0 158	°C °F	Dec int
Ar 5	Antifreeze heaters / integration heating in defrost 0= ON only with thermoregulation control 1= ON with thermoregulation and during the defrosting cycle	0	1		
Ar 6	Antifreeze probe to manage heaters / support heaters in Chiller mode. 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet	0	3		
Ar 7	Antifreeze probe to manage heaters / support heaters in HP mode. 0= Not enabled 1= Evaporator inlet. 2= Evaporator outlet 1 and 2. 3= Evaporator outlet 1 and 2 and common outlet.	0	3		
Ar 8	Thermoregulation probe for anti-freeze / condenser heaters. 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. 4= Condenser water outlet 1 / 2 and common outlet.	0	4		
Ar 9	Anti-freeze heaters or condenser/evaporator water pump control with unit in remote OFF or stand-by mode: 0= Control not enable 1=Controlled by anti-freeze thermoregulation.	0	1		
Ar 10	Anti-freeze heaters control for condenser/evaporator faulty probe: 0= Anti-freeze heaters OFF 1= Anti-freeze heaters ON	0	1		
Boiler function					
Ar 11	Boiler function 0=Not enabled 1=Enabled for integration heating 2= Enabled for heating	0	2		
Ar 12	External air temperaure setpoint for boiler heaters (on)	-30.0 -22	70.0 158	°C °F	Dec int
Ar 13	Temperature differential for boiler heaters (off)	0 0	25.0 45	°C °F	Dec int
Ar 14	Time delay before turning the boiler on	0	250		Min
Boiler function in Chiller mode					
Ar 15	Setpoint for boiler heaters (on) in chiller	-30.0 -22	70.0 158	°C °F	Dec int
Ar 16	Proportional band for boiler heaters in chiller	-30.0 -22	70.0 158	°C °F	Dec int
Boiler function in heat pump					
Ar 17	Setpoint for boiler heaters (on) in HP	-30.0 -22	70.0 158	°C °F	Dec int
Ar 18	Proportional band for boiler heaters in HP	0.1 0	25.0 45	°C °F	Dec int
Ar 19	External air setpoint to stop the compressor as integration function	-30.0 -22	70.0 158	°C °F	Dec int
Ar 20	External air differential to stop the compressor as integration function	0.1 0	25.0 45	°C °F	Dec int
Anti freeze alarm					

Ar 21	Termoregulation probe anti freeze alarm in chiller mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature	0	4		
Ar 22	Termoregulation probe anti freeze alarm in heat pump mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature	0	4		
Ar 23	Termoregulation probe anti freeze alarm water condenser 0= not enabled. 1= Condenser common water inlet probe. 2= Condenser common water inlet and condenser inlet 1 / 2 probe. 3= Condenser water outlet 1 / 2 probe. 4= Condenser water outlet 1 / 2 and common outlet.	0	4		
Anti freeze alarm					
Ar 24	Water pump / antifreeze alarm in OFF/ stand-by 0= Always in OFF 1= ON only with thermoregulation control	0	1		
Ar 25	Termoregulation probe water pump in antifreeze mode 0= Not enabled 1= Evaporator inlet 2= Evaporator outlet 1 and 2 3= Evaporator outlet 1 and 2 and common outlet 4= External temperature	0	4		
Ar 26	Set point starting water pump in antifreeze alarm	-30.0 -22	70.0 158	°C °F	Dec int
Ar 27	Differential starting water pump in antifreeze alarm	0.1 0	25.0 45	°C °F	Dec int
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Defrost					
Parameter	Description	min	max	udm	Risoluzione
dF 1	Defrost configuration: 0= Not enabled 1= Temperature / pressure 2= start depends on par. dF24 stop for time duration 3= start depends on par. dF24 stop for external contact 4= defrost with condenser fan	0	4		
dF 2	Temperature or pressure of the defrost start-up	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec Int
dF 3	Temperature or pressure of the defrost stop	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec Int
dF 4	Minimum defrost duration.	0	250	Sec	
dF 5	Maximum defrost duration.	1	250	Min	
dF 6	Time delay between the defrost of two circuits	0	250	Min	
dF 7	OFF compressor delay before the defrost	0	250	Sec	
dF 8	OFF compressor delay after the defrost	0	250	Sec	
dF 9	Defrost interval time of the same circuit	1	99	Min	
dF 10	Temperature setpoint for combined defrost of the 1 st circuit after parameter DF10 counting.	-30.0 -22	70.0 158	°C °F	Dec int
dF 11	Temperature setpoint for combined defrost end of the 1 st circuit.	-30.0 -22	70.0 158	°C °F	Dec int
dF 12	Temperature setpoint for combined defrost of the 2 nd circuit after parameter DF10 counting.	-30.0 -22	70.0 158	°C °F	Dec int
dF 13	Temperature setpoint for combined defrost end of the 2 nd circuit.	-30.0 -22	70.0 158	°C °F	Dec int
dF 14	Activation of all the steps of the 1 st circuit during the defrost. 0= Not enabled 1= Enabled	0	1		
dF 15	Activation of all the steps of the 2 nd circuit during the defrost. 0= Not enabled 1= Enabled	0	1		
dF 16	Time delay between two compressor ON in defrost mode	0	250	Sec	

dF 17	Fan control during defrost / dripping time 0= Not enabled 1= Only in defrost 2= For both functions defrost / dripping time	0	2		
dF 18	Pressure / temperature setpoint to force the ventilation ON during the defrost.	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec Int
Forced defrost					
dF 19	Minimum time delay before a forced defrost	0	250	sec	
dF 20	Pressure / temperature setpoint for a forced defrost	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec int
dF 21	Forced defrost differential	0.1 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
Defrost operative mode					
dF 22	Defrost start-up with 2 circuits 0= Independent 1= If both have reached the necessary requirements 2= If one has reached the necessary requirements	0	2		
dF 23	End defrost for two circuits and common ventilation. 0= Independent 1= If both have reached the necessary end defrost requirements 2= If one has reached the necessary end defrost requirements	0	2		
Start / stop defrost from analog input					
Parameters	description	min	max	udm	resolution
dF 24	Start / stop defrost probe 0= start and stop with condenser temperatur / pressure probe 1= start with evaporator pressure probe / stop with condenser temperatur / pressure probe 2= start with condenser temperatur / pressure probe / stop with evaporator pressure probe 3= start and stop with evaporator pressure probe	0	3		
Supply fan functioning during defrost cycle					
dF 25	Stop supply fan diuring defrost cycle 0= Not enabled 1= enable	0	1		
Defrost with condenser fan					
dF 26	Set point to enable defrost with condenser fan	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec int
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		
Recovery					
Parameters	description	min	max	udm	resolution
rC 1	Recovery modes 0 = not enabled 1 = 2 indipendent circuit 2 = both the circuit in parallel	0	2		
rC 2	Delay time delay with step forced off	0	250	Sec	
rC 3	Delay time delay with step forced off after the recovery valve activation	0	250	Sec	
rC 4	Recovery minimum time	0	250	Min	
rC 5	Minimum interval time between the end and the beginning of the next recovery	0	250	Min	
rC 6	Temperature setpoint to disable the recovery	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F Bar Psi	Dec int Dec int
rC 7	Temperature differential to restore the recovery	0.1 0 0.0 0	25.0 45 14.0 203	°C °F Bar Psi	Dec int Dec int
rC 8	Maximum time with recovery disabled (if temperature/pressure within rC6-rC7)	0	250	Min	
rC 9	Available condenser fan in recovery mode 0= Not enabled 1= enable	0	1		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		

Alarms					
Parameters	Description	min	max	m. u.	Resolution
Low alarm					
AL 1	Low pressure alarm delay from analog and digital input	0	250	Sec	
AL 2	Low pressure alarm delay from digital input after compressor stop if the low pressure switch is used for the pump down. AL02= 0 low pressure alarm not enable with compressor OFF AL02≠ 0 low pressure alarm enable after AL02 time with compressor OFF	0	250	Sec	10 Sec
AL 3	Low pressure alarm setpoint from analogue input	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec int
AL 4	Low pressure alarm differential from analogue input	0.1 0 0.0 0	25.0 45 14.0 203	°C °F bar psi	Dec int Dec Int
AL 5	Maximum number of low pressure events from digital/analogue inputs: Manual reset if AL05 = 0 Automatic reset if AL05 =16 From automatic to manual reset if AL05= 1..15	0	16		
AL 6	Low temperature/pressure alarm during defrost 0= Not enabled 1= Enabled	0	1		
AL 7	Low temperature/pressure alarm delay during defrost	0	250	Sec	
AL 8	Low temperature/pressure alarm with unit in OFF or stand – by: 0 = Not enabled 1= Alarm enabled	0	1		
High Alarm					
AL 9	High temperature/pressure alarm from analogue input	-30.0 -22 0.0 0	70.0 158 50.0 725	°C °F bar psi	Dec int Dec int
AL 10	High temperature/pressure alarm differential from analogue input	0.1 0 0.0 0	25.0 45 14.0 203	°C °F bar psi	Dec int Dec int
Oil Alarm					
AL 11	Low oil pressure / level delay from digital input	0	250	Sec	
AL 12	Minimum time for low oil pressure / level from digital input activation in normal working condition.	0	250	Sec	
AL 13	Maximum number of low oil pressure/level events: Always manual reset if AL13= 0 Always automatic reset if AL13 =16 From automatic to manual reset if AL13 = 1..15	0	16		
Flow alarm					
AL 14	Configuration 0= Not enabled 1= Only for chiller 2= Only for heat pump 3= For both chiller and heat pump	0	3		
AL 15	"Flow switch / supply fan overload" alarm delay after pump/fun activation.	0	250	Sec	
AL 16	Maximum time flow switch alarm active befor to block the water pump	0	250	Sec	
AL 17	Minimum "Flow switch / supply fan overload" active time duration.	0	250	Sec	
AL 18	Minimum "Flow switch / supply fan overload" not active time duration.	0	250	Sec	
Compressor overload alarm					
AL 19	Compressor overload alarm delay after compressor start-up	0	250	Sec	
AL 20	Maximum number of compressor overload alarm events Always manual reset if AL20 = 0 Always automatic reset if AL20 =16 From automatic to manual reset if AL20 =1..15	0	16		
Pump down alarm					
AL 21	Maximum number of pump down alarm events per hour in stop condition. After this number the alarm is logged, displayed and signalled with alarm relay + buzzer. Manual reset if AL21 = 0 Automatic reset if AL21 =16 From automatic to manual reset if AL21 =1..15	0	16		
AL 22	Maximum number of pump down alarm events per hour in start-up condition. After this number the alarm is logged, displayed and signalled with alarm relay + buzzer. Always manual reset if AL22 = 0 Always automatic reset if AL22 =16 From automatic to manual reset if AL21 =1..15 and parameter AL23 config.	0	16		

AL 23	Select if the pump down alarm must change from automatic to manual reset: 0= Always automatic reset 1= Manual reset after AL21 alarm events	0	1		
Anti-freeze alarm in Chiller mode					
AL 24	Minimum antifreeze setpoint in chiller (from -30 °C to AL24)	-30.0 -22	AL24	°C °F	Dec int
AL 25	Maximum antifreeze setpoint in chiller (from AL24 to 70 °C)	AL24	70.0 158	°C °F	Dec int
AL 26	Setpoint temperature for low anti-freeze alarm, low ambient temperature (air/air), low temperature air outlet (air/air). From AL24 to AL25.	AL24	AL25	°C/°F	Dec/int
AL 27	Differential of alarm reset in Chiller mode for anti-freeze, low ambient air temperature or low outlet air temperature alarms.	0 0	25.0 45	°C °F	Dec int
AL 28	Alarm delay for anti-freeze, low ambient air temperature or low outlet air temperature. The temperature must be lower than AL26 for this time duration before having the alarm event.	0	250	Sec	
AL 29	Maximum number of alarm events anti-freeze, low ambient air temperature or low outlet air temperature before changing from automatic to manual alarm reset: Always manual reset if AL29 = 0 Always automatic reset if AL29 = 16 From automatic to manual if AL29 = 1..15	0	16		
AL 30	Anti-freeze alarm configuration in chiller 0= to turn the compressors off when the anti-freeze control probe is lower than AL26 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are not activated. 1= to turn the compressors off when the anti-freeze control probe is lower than AL26 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are activated.	0	1		
Anti-freeze alarm in Heat pump mode					
AL 31	Setpoint of the minimum limit in heat pump (va da - 30 °C a AL32)	-30.0 -22	AL31	°C °F	Dec int
AL 32	Setpoint of the maximum limit in heat pump (va da AL31 a 70 °C)	AL31	70.0 158	°C °F	Dec int
AL 33	Anti-freeze alarm setpoint in heat pump Setpoint temperature for low anti-freeze alarm, low ambient temperature (air/air), low temperature air outlet (air/air). (from AL31 to AL32)	AL31	AL32	°C/°F	Dec/int
AL 34	Alarm differential in heat pump. To reset the anti-freeze, low ambient Temperature (air/air), low temperature air outlet (air/air) alarms.	0 0	25.0 45	°C °F	Dec int
AL 35	Anti-freeze alarm delay in HP for low outlet air temperature (air/air) Attention If during the Stand-by or remote off there is an anti-freeze alarm event, and the AL35 <>0, starting the heat pump mode, from keyboard or digital input. In this case the anti-freeze alarm is aborted and the compressor starts for the AL35 time to heat the air or the water. After the AL35 time if the antifreeze probe value is still lower than AL33 setpoint, for maximum AL36 seconds, the unit is stopped and the anti-freeze alarm is generated again.	0	250	Sec	
AL 36	Anti-freeze alarm delay for low air ambient temperature or low outlet air temperature in heat pump normal condition. The detected temperature must be lower than AL33 for the time AL36 before giving the alarm	0	250	Sec	
AL 37	Maximum number of anti-freeze alarm events for low air ambient temperature or low outlet air temperature in heat pump. It sets the alarm reset condition: Always manual reset AL37 = 0 Always automatic reset AL37 = 16 From automatic to manual reset if AL37 = 1..15	0	16		
AL 38	Anti-freeze alarm configuration in heat pump 0= to turn the compressors off when the anti-freeze control probe is lower than AL33 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are not activated. 1= to turn the compressors off when the anti-freeze control probe is lower than AL33 (after the time delay), the display shows the alarm label. Buzzer and Alarm relay are activated.	0	1		
Compressor high discharge temperature					
AL 39	Compressor high discharge temperature setpoint	0 0	150 302	°C °F	Dec / int int
AL 40	Compressor high discharge temperature differential	0 0	25.0 45	°C °F	Dec int
AL 41	Number of compressor high discharge temperature events per hour to determine the alarm reset condition: Always manual reset if AL41 = 0 Always automatic reset if AL41 = 16 From automatic to manual if AL41 = 1..15	0	16		
Generic alarm 1					

AL 42	Maximum number of generic alarm events (each event stop the regulation) before turning the alarm from automatic to manual: Always manual AL42 = 0 Always automatic AL42 =16 From manual to automatic if AL42 value is between 1 and 15	0	16		
AL 43	Generic alarm delay time after the digital input activation	0	250	Sec	
AL 44	Generic alarm delay time after the digital input is not activate	0	250	10 sec	10 sec
Alarm relay					
AL 45	Enable alarm relay with unit in off or stand – by: 0= Alarm output not enabled 1= Alarm output enabled	0	1		
Password reset: Alarm log – Compressor overload					
AL 46	Password value to reset the alarm log or the compressor overload alarm.	0	999		
AL 47	Thermal alarm of the compressor 0= lock the compressor 1= lock the whole circuit	0	1		
AL 48	Thermal alarm when the compressor is OFF 0 = Not enabled 1= Alarm enabled	0	1		
Oil alarm in OFF					
AL 49	Oil alarm when the compressor is OFF 0 = Not enabled 1= Alarm enabled	0	1		
Generic alarm / signal 2					
AL 50	Functioning generic alarm n° 2 0= only signal always automatic reset 1= the alarm block the unit reset depends on the value of parameter AL51	0	1		
AL 51	Maximum number of generic alarm events before turning the alarm from automatic to manual: Always manual AL51 = 0 Always automatic AL51 =16 From manual to automatic if AL51 value is between 1 and 15	0	16		
AL 52	Generic alarm delay time after the digital input activation	0	250	Sec	
AL 53	Generic alarm delay time after the digital input is not activate	0	250	Sec	10 sec
Reset High pressure / temperature alarm					
AL 54	Maximum number of high pressure / temperature alarm events before turning the alarm from automatic to manual: Always manual AL54 = 0 Always automatic AL54 =16 From manual to automatic if AL54 value is between 1 and 15	0	16		
Flow alarm condenser					
AL 55	"Flow switch water condenser alarm delay after pump activation.	0	250	Sec	
AL 56	Maximum time flow switch alarm active before to block the water pump	0	250	Sec	
AL 57	Minimum "Flow switch water condenser active time duration.	0	250	Sec	
AL 58	Minimum "Flow switch water condenser not active time duration.	0	250	Sec	
High water evaporator inlet temperature					
AL 59	Maximum number of high water temperature alarm events Always manual reset if AL59 = 0 Always automatic reset if AL59 =16 From automatic to manual reset if AL59 =1..15	1	16		
AL 60	High water temperature alarm delay time from ON compressor	0	250	Sec	10 sec
AL 61	Set point high water temperature				
AL 62	Differential high water temperature				
AL 63	Analogue input configuration. Allows to select which probe value NTC/PTC Pb1..Pb10	1	10		
Pr1	Password	0	999		
Pr2	Password	0	999		
Pr3	Password	0	999		

10 PROGRAMMING WITH THE “HOT KEY 64”

10.1 DOWNLOAD: HOW TO PROGRAM AN INSTRUMENT WITH A PROGRAMMED “HOT KEY”

1. Turn off the instrument supply
2. Insert the hot key.
3. Turn on the power supply.
4. Immediately the parameters are downloaded.

During the download the regulation is locked and the top display shows the “doL” blinking label. At the end of the download will appear:

“End” if the programming procedure is completely OK, after 30seconds the regulation starts automatically.

“Err” if the programming procedure has found an error and the parameter have not been transferred. In this case turn off and then on the instrument supply to repeat the operation or remove the hot key, with power supply off, to restart the regulation.

10.2 UPLOAD: HOW TO PROGRAM A “HOT KEY” WITH THE PARAMETERS OF THE INSTRUMENT

1. Turn on the power supply.
2. Insert the hot key.
3. Enter the function Menu.
4. Select the **UPL** function (on the bottom display).
5. Push **SET** key and immediately the instrument starts transfer the parameters into the Hot key.

During the upload the regulation is locked and the top display shows the “UPL” blinking label. At the end of the UPLOAD will appear:

“End” if the programming procedure is completely OK, after 30seconds the regulation starts automatically.

“Err” if the programming procedure has found an error and the parameter have not been transferred. Repeat the procedure.

To exit the UPL function push the MENU key or wait the timeout (15 sec).

11 PROGRAMMING USING THE KEYBOARD

Through the instrument keyboard it is possible to enter the programming. In all the three accessible levels the user can show and modify both value and visibility of the parameters. To ensure an easy navigation through the different levels the common parameters have been named and grouped under a family name.

The three levels of programming:

- Pr1 User level
- Pr2 Maintenance level
- Pr3 OEM level

11.1 PASSWORD DEFAULT VALUES

- Password level Pr1 = 1
- Password level Pr2 = 2
- Password level Pr3 = 3

Under the function Menu (to reset the Alarm Log or the Compressor Overload) the password is 0 (see parameter AL46)

Each password can be changed, the range is from 0 to 999.

Each parameter has two level: visibility and modify. Therefore it can be configured as follow:

- The parameter can be showed and changed.
- The parameter can be showed but not changed.

11.2 ENTER THE PR1 - PR2 - PR3 PROGRAMMING LEVELS

Pr1 LEVEL:

Push **SET** + **DOWN** together for 3 seconds, the top display shows the PAS label and the bottom display shows the Pr1 label. The leds cir1/cir2 are blinking (up and down leds) to inform that you now are in PR1 programming level.

Pr2 LEVEL:

From the Pr1 level push the UP key for 2 seconds and the bottom display will show Pr2. The top display still shows PAS.

Pr3 LEVEL:

From the Pr2 level push the UP key for 2 seconds and the bottom display will show Pr3. The top display still shows PAS.

After selecting the level push the SET key and the top display will show the 0 blinking value where to insert the password .

Set the password level using the UP and DOWN keys then confirm with SET key.

Depending on the password value there will be the different level access, if the password is wrong the instrument shows the password value again.

ATTENTION:

For all the programming levels Pr1,2,3: the CF family (or configuration parameters) can not be changed if the unit is running in chiller, heat pump. The user can check the leds #1 and #2 and if they are blinking it is not possible to change this parameters but it is necessary to set the unit in stand-by and then enter the programming again.

During the defrost the dF family can't be programmed.

11.3 HOW TO CHANGE A PARAMETER VALUE

Enter the programming

1. Push the **SET** + **DOWN** keys together for 3 seconds;
2. Select the parameter label with up and down keys;
3. Push **SET** to enter the parameter value;
4. Change the value with **UP** or **DOWN** keys;
5. Push “**SET**” to confirm, after some seconds the display shows the next parameter;
6. Exit: Push **SET** + **UP** together when a parameter label is displayed or wait 15seconds without pushing a key.

NOTE: a new parameter value is confirmed also after the 15 seconds of timeout is expired (without pushing SET key to confirm).

11.4 CHANGE THE PASSWORD VALUE

Pr1 LEVEL

Remember that it is necessary to know the old password value.

- 1) Enter the Pr1 level
- 2) Select a parameter family.
- 3) Inside the family select the “Pr1 - 1”, Pr1 on the bottom display, the current password value 1 on the top display. Push the SET key to change the value that now is blinking.
- 4) Use the UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new value.
- 5) The top display blinks for some seconds and then shows the next parameter.
- 6) Exit the programming pushing SET + UP together or wait the timeout.

Pr2 LEVEL

Remember that it is necessary to know the old password value.

1. Enter the Pr2 level

2. Select a parameter family.
3. Inside the family select the "**Pr2 - 2**", Pr2 on the bottom display, the current password value 2 on the top display. Push the SET key to change the value that now is blinking.
4. Use the UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new value.
5. The top display blinks for some seconds and then shows the next parameter
6. Exit the programming pushing SET + UP together or wait the timeout.

Inside the Pr2 level it is possible to change also the Pr1 password.

Pr3 LEVEL

Remember that it is necessary to know the old password value.

1. Enter the Pr3 level
2. Select a parameter family.
3. Inside the family select the "**Pr3 - 3**", Pr3 on the bottom display, the current password value "3" on the top display. Push the SET key to change the value that now is blinking.
4. Use the UP or DOWN key to insert the NEW PASSWORD value, then push SET to confirm the new value.
5. The top display blinks for some seconds and then shows the next parameter
6. Exit the programming pushing SET + UP together or wait the timeout.

Inside the Pr3 level it is possible to change also the Pr1 and Pr2 passwords.


11.5 ENTER THE PROGRAMMING LEVEL PR1

Enter the Pr1 "User level ":

1. Push the **SET + DOWN** keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.
2. Push **SET** key and the top display shows a blinking 0, with **UP** or **DOWN** insert the Pr1 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
3. Select a parameter family with **DOWN** or **UP** keys.
4. Push **SET** to enter, the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the parameters belonging to this family.

Parameter status, leds and bottom display in Pr1

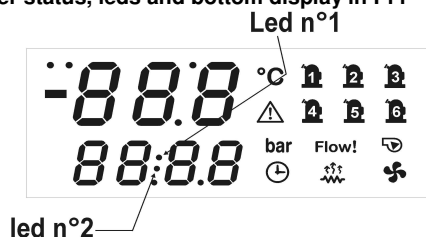

- If the selected parameter can not be changed the leds 1 and 2 are blinking.
- In Pr1 level the user can not see and change any parameter of Pr2 and Pr3.
- The MENU key allows to exit from a family to reselect another without exit the Pr1 level.
- To exit completely the programming push SET + UP.

11.6 ENTER THE PROGRAMMING LEVEL PR2


Enter the Pr2 "maintenance level ":

1. Push the **SET + DOWN** keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.

2. Push UP key for 2 seconds and the top display will show Pr2.
3. Push **SET** key and the top display shows a blinking 0, with **UP** or **DOWN** insert the Pr2 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
4. Select a parameter family with **DOWN** or **UP** keys.
5. Push **SET** to enter, the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the parameters belonging to this family.

Parameter status, leds and bottom display in Pr2

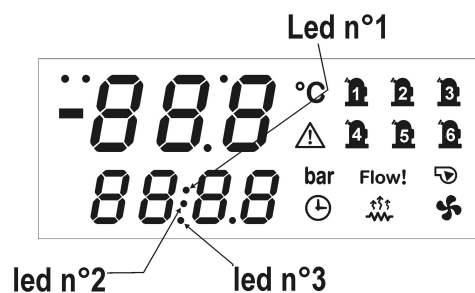

- Leds 1 / 2 are blinking: the parameter can not be changed.
- All the leds are off: the parameter can not be seen in Pr1 level.
- Led 3 is on: the parameter can be seen in Pr1 level.
- Leds 1 / 2 are blinking and led 3 is on: the parameter can be showed and changed in Pr2, showed but not changed in Pr1.
- Leds 1 / 2 / 3 are blinking: the parameter can be showed and changed in Pr2 and in Pr21.
- In Pr2 level the user can not see and change any parameter of Pr3 level.
- The MENU key allows to exit from a family to reselect another without exit the Pr2 level.
- The MENU key allows to pass to Pr1 starting from a family label.
- To exit completely the programming push SET + UP.


11.7 ENTER THE PROGRAMMING LEVEL PR3

Enter the Pr3 "OEM level ":

1. Push the **SET + DOWN** keys together for 3 seconds. The top display shows PAS while the bottom display shows Pr1 labels.
2. Push UP key for 2 seconds and the top display will show Pr2.
1. Push UP key again for 2 seconds and the top display will show Pr3
3. Push **SET** key and the top display shows a blinking 0, with **UP** or **DOWN** insert the Pr3 password. Push **SET** and, if the value is correct, top display will show the first family of parameters "**ALL**". Otherwise set the password again.
4. Select a parameter family with **DOWN** or **UP** keys.
5. Push **SET** to enter, the bottom display shows the first available parameter label while the top display shows its value.

The user can shows and modify all the parameters belonging to this family.

Parameter status, leds and bottom display in Pr3

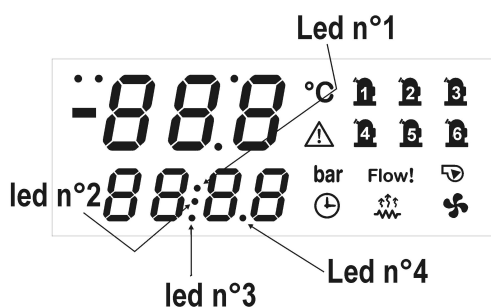

- Leds 1 / 2 are blinking: the parameter can not be changed.
- All the leds are off: the parameter is available only in Pr3.
- Led 4 on: the parameter can be changed also in Pr2.
- Led 4 blinking: the parameter is visible also in Pr2.
- Leds 3 / 4 on: the parameter is available in Pr2 and in Pr1.
- Leds 3 / 4 blinking: the parameter is visible in Pr1 and in Pr2.
- The MENU key allows to exit from a family to reselect another without exit the Pr2 level.
- The MENU key allows to pass to Pr1 starting from a family label.
- To exit completely the programming push SET + UP.

11.8 MOVE A PARAMETER LEVEL FROM PR2 TO PR1

Enter Pr2 programming level

Select the parameter and if the led # 3 is off: the parameter is available only in Pr2.

To show the parameter also in Pr1:

1. Keep pushed SET key;
2. Push 1 time the DOWN key and the led 3 should be on, the parameter is now available in Pr1.

To hide the parameter in Pr1:

1. Keep pushed SET key;
2. Push 1 time the DOWN key and the led 3 should be off, the parameter is now removed from Pr1.

11.9 MOVE A PARAMETER FROM PR3 TO PR2 TO PR1

Enter Pr3 programming level, here the parameter are all visible:

Select the parameter, if all the leds are off the parameter is available only in Pr3.

To show the parameter also in Pr2 and Pr1:

1. Keep pushed SET key;
2. Push 1 time the DOWN key and the leds 3 and 4 should be on, the parameter is now available also in Pr2 / Pr1.

To show the parameter only in Pr2:

1. Keep pushed SET key;
2. Push 1 time the DOWN key and the leds 3 is off, the parameter is now available also in Pr2.

To show the parameter only in Pr3:

1. Keep pushed SET key;
2. Push 1 time the DOWN key and the leds 3 and 4 are off, the parameter is now available only in Pr3.

11.10 VISIBILITY AND PARAMETER VALUE LOCKED

To set the only visibility and lock the parameter value it is necessary enter Pr3 programming level.

Pr1 PARAMETER VISIBILITY

Enter the Pr3 level

1. Select the parameter;

2. Keep pushed the SET key;
3. Push 1 time the MENU key and the led 3 change from on to blinking: the parameter is visible in Pr1 but can't be changed.

Pr2 PARAMETER VISIBILITY

Enter the Pr3 level

1. Select the parameter;
2. Keep pushed the SET key;
3. Push 1 time the MENU key and the led 4 change from on to blinking: the parameter is visible in Pr2 but can't be changed.

Leds 3 / 4 blinking: the parameter is visible in Pr1 and in Pr2 but in those levels now they can't be changed.

TO SET THE ORIGINAL TAG FOR THE PARAMETER Pr1 / Pr2

1. Keep pushed the SET key;
2. Push one time the MENU key, the leds 3 / 4 turn on, the parameter can be seen and modified in Pr1 and Pr2.

11.11 PROGRAMMING: DIGITAL INPUT AND OUTPUT POLARITY


The parameters that allow to configure different options such as:

1. Digital inputs
 2. Digital outputs (relay)
 3. Proportional output configured as ON/OFF
 4. Analogue input configured as digital input
- have a different parameter description that allows to configure the operating mode and the corresponding polarity.

Example of programming:

The bottom display shows the parameter label (CF36) Digital input ID1 configuration;

Note that the top display shows "c" or "o" before the configuration number.

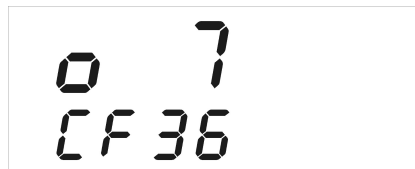

The selection 7 for the digital input ID1 (CF36) means that it is the "high pressure switch of circuit 1".

The label "o" means that the digital input is active for open contact.



Otherwise if the selection is 7 for the digital input ID1 (CF36) = "high pressure switch of circuit 1".

The label "c" means that the digital input is active for closed contact.

11.12 CHANGE THE POLARITY OF THE DIGITAL INPUTS-OUTPUTS

Enter the programming:

1. Select a parameter with digital input/output value, The top display shows the label o before the configuration number while the bottom display shows the parameter label.
2. Push SET key: the o label and the configuration number are blinking, use the UP or DOWN key and select the proper polarity (o / c) of the function, then push SET key to confirm it all.
3. The top display blinks for some seconds and then it will shows the next parameter.

4. To exit the programming push **SET + UP** together or wait the timeout (15seconds).

12 DISPLAY LAYOUT

As default, In normal condition, the display shows the circuit 1 information.

The displayed circuit is indicated from the corresponding led **Cir1** on (UP key), or **Cir2** (circuit 2, DOWN key).

12.1 HOW TO SHOW THE MEASUREMENT LIST.

With the led Cir1 on, push UP or Down keys to display the labels of the information of the circuit 1.

With the led Cir2 on, push UP or Down keys to display the labels of the information of the circuit 2.

Each measurement is defined by a label that indicates which if it is a pressure a temperature or a time.

12.2 SHOW THE CIRCUIT 1 OR 2

To swap between the information of the two circuits use the UP and DOWN key to select a label then push SET, check the led.

Example in fig.1

Led cir1 is on: the top display shows the value of the output evaporator temperature (7.8°C) of the circuit 1, The bottom display shows Out 1. Push SET key to swap to the circuit 2. **Fig2**

Led cir2 is on: the top display shows the value of the output evaporator temperature (7.9°C) of the circuit 2, the bottom display shows Out 2.

Fig.1

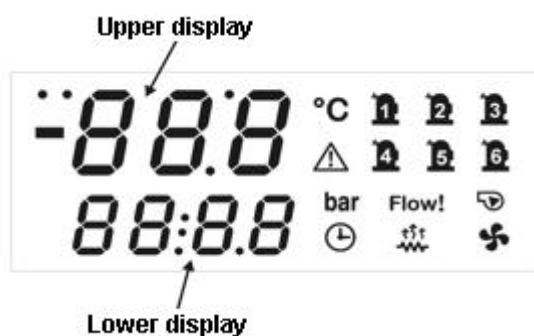


Fig.2



13 CUSTOM DISPLAY

The dP family of parameters allows to set a custom display read-out. The user can change the default read-out (both for instrument and remote terminals) of the measurements depending on the application.



13.1 DEFAULT READ - OUT OF THE TOP DISPLAY

To set the default value displayed on the top display:

1. Set the parameter dP03 = 0, it means configurable;
2. Select the dP01 parameter into the range 0..14 described here below:


PARAMETER VALUE	DESCRIPTION	CORRESPONDING LABEL
dP01=0	No display read out	No label
dP01=1	NTC temperature probe of the evaporator water inlet	Ein
dP01=2	NTC temperature probe of the evaporator water outlet 1 and 2	Out1 circuit 1 Out2 circuit 2
dP01=3	NTC temperature probe of the uscita common evaporator water outlet	Eout
dP01=4	NTC temperature probe of the condenser water inlet	CIn1 circuit 1 CIn2 circuit 2
dP01=5	NTC temperature probe of the common condenser water inlet	Cin
dP01=6	NTC temperature probe of the condenser water outlet	Cou1 circuit 1 Cou2 circuit 2
dP01=7	NTC temperature probe of the common condenser water outlet	Cout
dP01=8	NTC temperature probe of the dynamic external air setpoint	Et
dP01=9	NTC temperature probe of the free cooling water inlet	FCIn
dP01=10	NTC temperature probe of the free cooling external air value	FCEt
dP01=11	NTC temperature probe of the remote terminal 1	trt1
dP01=12	NTC temperature probe of the remote terminal 2	trt2
dP01=13	NTC temperature probe of the combined defrost	dEF1 circuit 1 dEF2 circuit 2
dP01=14	NTC temperature probe of the condenser	Cdt1 circuit 1 Cdt2 circuit 2

13.2 DEFAULT READ - OUT OF THE BOTTOM DISPLAY

To set the default value displayed on the bottom display:

1. Set the parameter dP03 = 0, it means configurable;
2. Select the dP02 parameter into the range 0..17 described here below:

PARAMETER VALUE	DESCRIPTION	CORRESPONDING LABEL
dP02=0	No display read out	No label
dP02=1	NTC temperature probe of the evaporator water inlet	Ein
dP02=2	NTC temperature probe of the evaporator water outlet 1 and 2	Out1 circuit 1 Out2 circuit 2
dP02=3	NTC temperature probe of the common evaporator water outlet	Eout

dP02=4	NTC temperature probe of the condenser water inlet	CIn1 circuit 1 CIn2 circuit 2
dP02=5	NTC temperature probe of the common condenser water inlet	Cin
dP02=6	NTC temperature probe of the condenser water outlet	Cou1 circuit 1 Cou2 circuit 2
dP01=7	NTC temperature probe of the common condenser water outlet	Cout
dP02=8	NTC temperature probe of the dynamic external air setpoint	Et
dP02=9	NTC temperature probe of the free cooling water inlet	FCIn
dP02=10	NTC temperature probe of the free cooling external air value	FCET
dP02=11	NTC temperature probe of the remote terminal 1	trt1
dP02=12	NTC temperature probe of the remote terminal 2	trt2
dP02=13	NTC temperature probe of the combined defrost	dEF1 circuit 1 dEF2 circuit 2
dP02=14	NTC temperature probe of the condenser	Cdt1 circuit 1 Cdt2 circuit 2
dP02=15	Pressure probe of the condenser 4÷20mA - 0.5V	Cdt1 circuit 1 Cdt2 circuit 2
dP02=16	Pressure probe of the evaporator 4÷20mA - 0.5V	LP1 circuit 1 LP2 circuit 2
dP02=17	Clock	

TOP DISPLAY: CUSTOM EXAMPLE

Parameter dP01=01. The default read out for the circuit 1 and the circuit 2 is the NTC probe value of the evaporator water inlet.

Parameter dP01=02. The default read out for the circuit 1 is the evaporator outlet 1 temperature, while for the circuit 2 is the evaporator 2 outlet temperature.

BOTTOM DISPLAY: CUSTOM EXAMPLE

Parameter dP02=03. The default read out for the circuit 1 and the circuit 2 is the NTC probe value of the evaporator water outlet.

Parameter dP02=14. The default read out for the circuit 1 is the condenser 1 temperature, while for the circuit 2 is the condenser 2 temperature.

13.3 FORCED READ - OUT OF THE TOP AND BOTTOM DISPLAY

To force the display read-out:

1. Set the **dP03** parameter not equal to 0
2. Select the value range 1..3

These configurations allow to show together two temperatures or two pressures of the same circuit in order to have an easier reading of the measurements:

Par. **dP03 = 1**

Top display: for both the circuits 1,2:

- Evaporator water inlet, with the **Ein** label.

Bottom display: circuit 1:

- Evaporator 1 water outlet, with the label **Out1**

Bottom display: circuit 2:

- Evaporator 2 water outlet, with the label **Out2**.

Par. **dP03 = 2**

Top display of the circuit 1:

- Condenser 1 water inlet temperature with the label **CIn1**

Bottom display of the circuit 1

- Condenser 1 water outlet with the label **Cou1**.

Top display of the circuit 2:

Condenser 2 water inlet temperature with the label **Cin2**

Bottom display of the circuit 2

- Condenser 2 water outlet with the label **Cou2**.

Par. **dP03 = 3**

Top display of the circuit 1:

- Condenser probe temperature **Cdt1** / pressure **CdP1**

Bottom display of the circuit 1

- Evaporator pressure probe **LP1**

Top display of the circuit 2:

Condenser probe temperature **Cdt2** / pressure **CdP2**

Bottom display of the circuit 2

Evaporator pressure probe **LP2**

13.4 DEFAULT DISPLAY READ - OUT OF THE REMOTE PANELS VI620S AND VI820S

If the parameter dP04 = 0 the upper display of the remote panels #1 and #2 depends on the parameter values dP01 – dP02 – dP03; to show the temperature detected by the internal probe of the remote panel accessing the function menu under the function trEm.

If the parameter dP04 = 1 the upper display of the remote panels #1 and #2 show their internal NTC sensor (ambient temperature); to show the same temperature it is possible to access the function menu under the function trEm.

14 DISPLAY INFORMATION

14.1 SHOW THE SET POINT VALUE

Push and release the **SET** key, the leds of the circuits are off and the set value is displayed.

In stand-by the bottom display shows **SetC** (set chiller), by pushing SET again the next label is **SetH** (set heat pump).

If the unit is running the only set displayed is related to the running mode.

14.2 MODIFY THE SET POINT

- 1) Push **SET** key for at least **3** seconds: the leds of the circuits are off and the set value is blinking.
- 2) Use the **UP** or **DOWN** key to modify the setpoint.
- 3) Push **SET** to confirm or wait the timeout (15seconds).

14.3 SHOW THE ACTIVE SETPOINT DURING ENERGY SAVING OR DYNAMIC SETPOINT

If the unit is running in chiller or HP, the Energy Saving or the Dynamic Setpoint activity is signalled by the blinking led of the SET button.

Chiller mode: push **SET** one time, the bottom display shows the **SEtC** (set chiller) while the top display shows the set value. Only if the Energy saving or the Dynamic Setpoint are active, pushing another time the **SET** key, the bottom display shows “**SEtr**” (real setpoint), and the top display shows the setpoint that the unit is really using for the thermoregulation.

Chiller mode: push **SET** one time, the bottom display shows the **SEtH** (set Heat pump) while the top display shows the set value. Only if the Energy saving or the Dynamic Setpoint are active, pushing another time the **SET** key, the bottom display shows “**SEtr**” (real setpoint), and the top display shows the setpoint that the unit is really using for the thermoregulation.

ATTENTION

The **SEtr** label appears only if the Energy saving or the Dynamic Setpoint are active.

To modify the working setpoint it is necessary the setpoint values is displayed on both the display (temperature / temperature or temperature / pressure or pressure/ pressure)

without any identification label, otherwise the SET key swaps to the circuit information.



14.4 DISPLAY IN REMOTE OFF

From digital input configured as remote ON/OFF: the active input sets the unit in OFF (even when the unit is a motocondensing unit). The top display shows “OFF”, the led of the decimal point is blinking.

14.5 DISPLAY IN MOTOCONDENSING CONFIGURATION

The top display shows “ON” for active input and “OFF” for not active input. If the unit is running in Chiller the top display shows **OnC** otherwise **OnH** for heat pump.

The configuration for motocondensing, as for chiller or HP, allows to show through the top and the bottom display all the detected input measurements and alarms.

15 FUNCTION MENU “M” KEY

The function Menu is composed of the following items:

- 1) Show and reset the alarms **ALrM**
- 2) Compressor overload alarm reset **COtr**
- 3) Show and reset the alarm log **ALOG**
- 4) Upload the parameter into the Hot Key **UPL**
- 5) Enable – disable one or the two circuits **CrEn**
- 6) Enable – disable one of the compressors **COEn**
- 7) Display the compressor discharge temperature **COdt**
- 8) Show and reset the number of compressor running hour **Hour**
- 9) Show and reset the number of compressor starts-up **COSn**
- 10) Show the condensing fan speed percentage of the proportional output **Cond**
- 11) Show the percentage of the proportional output 0 ÷ 10 Vdc **Pout**
- 12) Time counting to next defrost cycle, under heat pump mode, **dF**
- 13) Show the probe temperatures that enabled to control the auxiliary output **uS**
- 14) Show the probe the temperature of the remote panels **trEM**

MENU FUNCTION ACCESS: Push and release the **M** key.

MENU FUNCTION ACCESS: Push and release the **M** key or wait the 15seconds timeout limit. With the **UP** or **DOWN** keys move inside the label list.

15.1 ALARM LIST: SHOW AND RESET

ALrM FUNCTION

Enter the function MENU pushing M key one time

- 1) Use the **UP** or **DOWN** to select the ALrM label
- 2) Push **SET** key (Nothing happens if there are no active alarm events)
- 3) Bottom display: alarm label code. Top display: label **rSt** to reset or **NO** if it is not possible.
- 4) Use the **UP** or **DOWN** to scroll the alarm list.

- 5) Pushing **SET** when the **rSt** label is displayed the corresponding alarm will be reset, then the display shows next alarm in the list, pushing **SET** again the alarm is reset and the display shows next alarm etc. Nothing happens by pushing **SET** when the label **NO** is displayed, in this case push **UP** or **DOWN** to move to another alarm label.
- 6) To exit the ALrM reset function push **MENU** one time or wait the timeout.

15.2 COMPRESSOR OVERLOAD ALARM RESET

COtr function resets the compressor overload alarm event.

Within the **COtr** function all the active compressor overload alarms are displayed in a list.

Labels involved in **COtr**: **CO1r = compressor 1 overload reset ... CO6r = compressor 6 overload reset**. Labels **CO1r – CO2r – CO3r – CO4r – CO5r – CO6r** are available if the digital inputs have been previously configured.

ATTENTION

In the **COtr** function the alarm is displayed only after the number of events per hour have reached the **Par. AL20** value, only after that number of events per hour the alarm becomes **MANUAL**.

MANUAL ALARM RESET PROCEDURE

Enter Menu function

1. Use **UP** or **DOWN** key and select the **COtr** on the bottom display.
2. Push **SET** one time, if there are active alarms the bottom display shows the alarm label eg. **CO1r** (for compressor 1) while the top display shows the label **rSt** to reset the alarm or **NO** if the alarm can not be reset. Use the **UP** or **DOWN** keys to scroll all the alarm list.
3. Nothing happens by pushing **SET** when the label **NO** is displayed.
4. Pushing **SET** when the **rSt** label is displayed the corresponding alarm will be reset after the password: bottom display = **ArSt** while the top display = **PAS**.
5. Push **SET** and the top display blinks 0 while the bottom shows **PAS**. Insert the password using **UP** or **DOWN** key (see **AL** parameter family). If the password is OK the **ArSt** blinks for per 3seconds, if the password value is not correct the top display blinks 0 while the bottom shows **PAS**. If within 5 seconds no value is inserted the display label come back to **CO1r** function.
6. To exit the **COtr** function push **MENU** or wait the timeout.
7. Repeat operation 1 – 5 to reset the other alarms.

15.3 COMPRESSOR OVERLOAD PASSWORD.

The default value is **0** to change this value enter **Pr3** level under the **AL** parameter family

15.4 ALARM LOG LIST

ALOG FUNCTION TO SEE THE ALARM LOG

The function and the alarm codes are visible only if there are alarm events. If many events are active at the same time the list displayed by increasing order.

Enter the function Menu

1. Select **ALOG**
2. Push **SET** one time. Nothing happens if there are no active alarm events.
3. The bottom display shows the alarm label, the top display shows the a number in the range 00 to 99.
4. Use the **UP** or **DOWN** keys to scroll the list.
5. To exit the **ALOG** function push **MENU** or wait the timeout.

15.5 ERASE THE ALARM LOG LIST

ALOG FUNCTION TO ERASE THE LOG LIST

1. Enter the function Menu.

- Use the **UP** or **DOWN** keys to select **ALOG** on the bottom display.
- Push on e time the **SET** key.
- Within the **ALOG** function select with **UP** or **DOWN** keys, the **ArSt** label on the bottom display while the top display shows **PAS**.
- Push **SET**: the bottom display shows **PAS** and the top display a blinking 0.
- Insert the password (See parameter family AL)
- If the password is OK the label **ArSt** blinks for 5 seconds then the display returns to normal condition read-out (probes).
- If the password is not correct the display shows **PAS** again. In any case is possible to scroll the list with **UP** or **DOWN**
- To exit push the M key one time or wait the timeout.

15.6 PASSWORD VALUE OF THE ALARM LIST

The default value is **0** to change this value enter Pr3 level under the AL parameter family.

THE ALARM LIST CONTAINS 100 EVENTS IN A FIFO STRUCTURE. WHEN THE MEMORY IS FULL ANY NEW ALARM WILL ERASE THE OLDEST.

15.7 DISABLE – ENABLE A SINGLE CIRCUIT

Through the instruments keyboard is possible to completely disable a single circuit for maintenance or to use just a cooling part of of the unit.

CrEn FUNCTION enables – disables a circuit from keyboard.

Label involved with CrEn function: **Cr1E = circuit 1, Cr2E = circuit 2**

DISABLE A CIRCUIT

Enter the function Menu

- Use **UP** or **DOWN** keys to select **CrEn** on the bottom display
- Push **SET** key: the bottom display = **Cr1E**, top display = **En**.
- Select the circuit 1 or 2 with **UP** or **DOWN** (**Cr1E** or **Cr2E**).
- Push **SET** key for 3 seconds when one of the two **Cr1E**, **Cr2E** label are displayed. The top display shows the **En** blinking label, use the **UP** or **DOWN** to change in **diS** (Disabled) or **En** (Enabled). then push **SET** key to confirm the new selection. The display shows next circuit status.
- To exit the **CrEn** function push **MENU** key or wait the timeout.

15.8 READ-OUT OF A CIRCUIT NOT ENABLED

If one circuit is disabled the bottom display shows **diS** alternated with the label name of the measurement selected.

Circuit 1 = **diS** the bottom display shows **b1dS** = circuit 1 disabled.

Circuit 2 = **diS** the bottom display shows **b2dS** = circuit 2 disabled.

The **b2dS** label appears only if the 2nd circuit is configured,

15.9 ENABLE OR DISABLE A SINGLE COMPRESSOR

Through the instruments keyboard is possible to disable a single compressor for maintenance or to lock it when malfunctioning.

COEn FUNCTION compressors running status.

Label involved in **COEn** function: **CO1E = Compressor 1 status... CO6E = Compressor 6 status**

The **COEn** function uses only the compressors configured by the corresponding output parameters.

Enter the function Menu

- Use the **UP** or **DOWN** keys to select **COEn**.

- Push **SET** key: bottom display = **CO1E**, top display = **En**
- Select the compressor with **UP** or **DOWN**: **CO2E** - **CO3E** - **CO4E** - **CO5E** - **CO6E** if available.
- Push **SET** for 3 seconds when the label corresponds to the compressor to disable: **CO1E** - **CO2E** - **CO3E** - **CO4E** - **CO5E** - **CO6E**. The top display shows the blinking **En** label, use the **UP** or **DOWN** key and change to **diS** (Compressor disabled) or **En** (compressor enabled) then push **SET** to confirm, the display shows next item.
- To exit the **COEn** function push **MENU** key or wait the timeout.

15.10 READ-OUT OF A COMPRESSOR NOT ENABLED

During the normal running condition a disabled compressor is displayed with a blinking label alternated with the measurement value of the display.

If the compressor is disabled these the corresponding labels: **C1dS** = compressor 1 disabled...**C6dS** = compressor 6 disabled

The label **C1dS**...**C6dS** are available only if the corresponding compressor is configured.

15.11 READ-OUT OF THE COMPRESSOR DISCHARGE TEMPERATURE PROBE

The menu function allows to read-out the compressor temperature probes.

Codt FUNCTION shows the discharge temperatures

Label involved in **Codt** function: **CO1t** Compressor 1 discharge temperature... **CO6t** Compressor 6 discharge temperature

- Use the **UP** or **DOWN** keys to select **Codt**
- Push **SET** key: bottom display = **CO1t**, top display = temperature value of that probe.
- Use the **UP** or **DOWN** kys to scroll the list: **CO1t** or **CO2t** or **CO3t** or **CO4t** or **CO5t** or **CO6t**
- To exit the **COEn** function push **MENU** key or wait the timeout

ATTENZIONE

The labels **Codt** are available only if the corresponding compressor probe is configured.

The display resolution is 0.1 °C until the read-out is 99.9, over 100 °C it is 1 °C.

15.12 READ-OUT OF THE RUNNING HOURS

This menu allows to shows all the time running hours of the compressors, supply fan and pumps.

Hour FUNCTION to show the controlled load consumption

Label involved in the Hour function:

CO1H Compressor 1 running hours .. **CO6H** Compressor 6 running hours.

EP1H Evaporator water pump or Supply fan running hours (air/air)

EP2H Support evaporator water pump running hours


CP1H Condenser water pump running hours

CP2H Support condenser water pump running hours

The labels are displayed only if the corresponding output is present and configured.

The running hours is displayed on the top display, the resolution is x 10 hours (eg 2 means 20 hours, 20 means 200hours)

Enter the function Menu

- Use the **UP** or **DOWN** keys to select **Hour**
- Push **SET** key: bottom display = above labels, top display = hours x10. The time  is on.
- Use the **UP** or **DOWN** keys to scroll the list.
- To exit the Hour function push **MENU** key or wait the timeout

15.13 RESET THE RUNNING HOUR

Enter the function Menu

1. Within the Hour function select, with UP or DOWN, the interested label: CO1H, CO2H, CO3H, CO4H, CO6H, EP1H, EP2H, CP1H, CP2H.
2. Push the **SET** keys for 3seconds: the top display shows the running hours blinking value, then it shows 0 to confirm the reset. The next load label is automatically loaded.

To exit the Hour function push MENU key or wait the timeout

15.14 READ-OUT OF THE COMPRESSOR STARTS-UP

For each compressor is possible to show the number of starts-up.

COSn FUNCTION: number of starts-up of the compressor

Label involved in COSn function: **C1S** number of compressor 1 starts-up .. **C6S** number of compressor 6 starts-up

The labels are displayed only if the corresponding output is present and configured

The number of starts-up is displayed on the top display, the resolution is x 10 (eg 2 means 20 starts, 20 means 200starts)

Enter the function Menu

1. Use the UP or DOWN keys to select **COSn**.
2. Push **SET** one time: the label of the first load C1S is showed on the top display, the bottom display shows the number x10.
3. With UP or DOWN scroll the compressor list.
4. To exit the Hour function push MENU key or wait the timeout

15.15 RESET THE STARTS-UP NUMBER

Enter the function Menu

1. Within the Hour function select, with UP or DOWN, the interested label: CS1, CS2, CS3, CS4, CS6.
2. Push the **SET** keys for 3seconds: the top display shows the running hours blinking value, then it shows 0 to confirm the reset. The next load label is automatically loaded.
3. To exit the Hour function push MENU key or wait the timeout.

15.16 READ-OUT OF THE PROPORTIONAL OUTPUT PERCENTAGE OF THE CONDENSER FAN CONTROL

The proportional outputs of the two circuits, that control the fan speed, can be showed in the menu function.

Cond FUNCTION selects the proportional output 1 and 2.

Label involved in Cond function:

Cnd1 Proportional output status of the condenser fan of the circuit 1.

Cnd2 Proportional output status of the condenser fan of the circuit 2.

TO SEE THE OUTPUT PERCENTAGE:

Enter the function menu

1. Use the UP or DOWN keys to select **Cond**.
2. Push **SET** key: the bottom display shows Cnd1, the top display shows the output percentage.
3. Use the UP or DOWN keys to select Cnd1 or Cnd2, the top display always shows the value, between 0% and 100%, of the proportional output of the selected circuit.
4. To exit the Hour function push MENU key or wait the timeout.

15.17 READ-OUT OF THE FOUR PROPORTIONAL OUTPUT

The four proportional outputs, 4..20ma or 0-10V, can be showed in the menu function.

Pout FUNCTION selects the proportional outputs.

Label involved in Cond function:

Pou1 Proportional output for dumper control or to drive the external relay 1

Pou2 Proportional output for dumper control or to drive the external relay 2

Pou3 Proportional output for dumper control or to drive the external relay 3

Pou4 Proportional output for dumper control or to drive the external relay 4

The labels are displayed only if the corresponding output is present and configured.

TO SEE THE FOUR OUTPUT PERCENTAGE:

Enter the function menu

1. Use the UP or DOWN keys to select **Pout**.
2. Push **SET** key: the bottom display shows Pou1, the top display shows the output percentage.
3. Use the UP or DOWN keys to select Pou1, Pou2, Pou3 or Pou4 the top display always shows the value, between 0% and 100%, of the proportional output of the selected circuit.
4. To exit the Hour function push MENU key or wait the timeout.

ATTENTION:

If the proportional output Pou1 - Pou2 - Pou3 - Pou4 are configured to drive an external relay the display will show 0=relay off and 100=relay on.

15.18 READ-OUT OF THE TIME COUNTING TO THE NEXT DEFROST

The 2 times delay to next defrosts of the two circuits can be showed in the menu function.

dF FUNCTION time to next defrost.


Label involved in dF function:

dF1 delay time to next defrost of the circuit 1

dF2 delay time to next defrost of the circuit 2

The labels apperas on if the heat pump configuration is enabled.

Enter the function menu :

1. Use the UP or DOWN keys to select **dF**
2. Push **SET** key: the dF1 label is showed on the top display, the bottom display shows the time delay to next defrost in minutes / seconds. The  icon is on.
3. Use the UP or DOWN keys to select dF1 or dF2.
4. To exit the Hour function push MENU key or wait the timeout.

15.19 READ-OUT OF THE PROBES CONFIGURED TO CONTROL AN AUXILIARY OUTPUT RELAY

The probe values, configured to control the auxiliary relay output, can be showed in the menu function.

uS FUNCTION temperature/pressure value of the control probe for auxiliary output.

Label involved in uS function:

uSt1 auxiliary probe value of the circuit 1

uSt2 auxiliary probe value of the circuit 2

Enter the function menu

1. Use the UP or DOWN keys to select **uS**.
2. Push **SET** key: the label **uSt1** (temperature probe) or **uSP1** (Pressure probe) is showed on bottom display, the top display shows the the temperature or pressure value.
3. Use the UP or DOWN keys to select **uSt1** auxiliary probe for circuit 1 or **uSt2** auxiliary probe for circuit 2.
4. To exit the Hour function push MENU key or wait the timeout.

15.20 How TO DISPLAY THE TEMPERATURE OF THE INTERNAL TEMPERATURE SENSOR OF THE REMOTE TERMINALS 1 OR 2

Inside the function menu it is possible to see the ambient temperature detected by the NTC sensor

FUNCTION trEM to show the temperature of the remote panels

Identification label **trEM**.

trE1 value of the NTC probe of the remote #1

trE2 value of the NTC probe of the remote #2

Select with **UP** or **DOWN** the **trEM** function

Push **SET** the trE1 or trE2 label is shown on the bottom display, the top display shows the probe value.

Use the UP or DOWN arrow to change between **trE1** or **trE2** read-out.

To exit to the normal display read-out push MENU or wait the time – out time.

ATTENTION:

THE trEm function and the labels trE1 or trE2 appear only if the CF74 = =2 or 3 (remote panel 1 configuration) or if the parameter CF75 = 2 or 3 (remote panel 2 configuration).

16 TABLE OF THE OUTPUT STATUS IN ALARM CONDITION

The alarm codes are made of letters and numbers to define the different typologies:..

16.1 ALARM: “A” TYPE AND CORRESPONDING OUTPUT OFF

Alarm Code	Alarm description	Compressor	Anti freeze heaters Boiler	Support heaters	Evap. Pump. Supply fan	Condenser Pump	Ventila z. cond. Cir1 Cir2	Auxiliary relay
AP1	Probe PB1 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP2	Probe PB2 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP3	Probe PB3 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP4	Probe PB4 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP5	Probe PB5 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP6	Probe PB6 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP7	Probe PB7 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP8	Probe PB8 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP9	Probe PB9 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
AP10	Probe PB10 Alarm	Yes	Yes (1)	Yes			Yes	Yes (2)
ALti	Low air temperature of the evaporator inlet (air / air unit) Alarm							
AEFL	Evaporator flow alarm	Yes	Yes (boiler)		Yes (3)		Yes	
ACFL	Condenser flow alarm	Yes				Yes (3)	Yes	
AtSF	Fan supply overload alarm	Yes		Yes	Yes		Yes	
AEUn	Unloading signalling from evaporator							
AtE1	Water pump overload alarm evaporator 1	Yes (4)	Yes (boiler) (5)		Yes		Yes	
AtE2	Water pump overload alarm support evaporator 2	Yes (4)	Yes (boiler) (5)		Yes		Yes	
AtC1	Water pump overload alarm condenser 1	Yes (4)				Yes	Yes	
AtC2	Water pump overload alarm support condenser 2	Yes (4)				Yes	Yes	
AEP1	Water pump maintenance evaporator 1							
AEP2	Water pump maintenance support evaporator 2							
ACP1	Water pump maintenance condenser 1							
ACP2	Water pump maintenance support condenser 2							
ArtC	Clock alarm							
Atr1	Remote terminal n° 1 configured but not connected							
Atr2	Remote terminal n° 2 configured but not connected							
ArtF	clock failure							
ALOC	Generic alarm with unit stopped	Yes			Yes	Yes	Yes	Yes
AEE	Eeprom alarm	Yes			Yes	Yes	Yes	Yes
ACF1	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF2	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF3	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF4	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF5	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF6	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF7	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF8	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ACF9	Configuration alarm	Yes			Yes	Yes	Yes	Yes
ArtF	Faulty clock							
ArtC	Clock error							
AEUn	Unloading signalling from high temp of. evaporator water							
ALti	Low evaporator inlet temperature in air/air unit							
AEht	High water temperature inlat evaporator	Yes						
AEP1	Evaporator #1 water pump maintenance							
AEP2	Evaporator #2 water pump maintenance							
ACP1	Condenser #1 water pump maintenance							
ACP2	Condenser #2 water pump maintenance							

- (1) = with probe configured as anti-freeze / boiler control and Ar10 = 0
 (2) = with probe configured as auxiliary relay control
 (3) = with manual alarm procedure
 (4) = Off compressors spent with only 1 water pump configured or with 2 pumps but both in alarm from the corresponding digital inputs.
 (5) = Boiler heaters off with only 1 water pump configured or with 2 pumps but both in alarm from the corresponding digital inputs (in this case the boiler heaters are on only with thermoregulation anti-freeze setpoint as evaporator protection function)

16.2 ALARM: “B” TYPE AND CORRESPONDING OUTPUT OFF

Alarm Code	Alarm description	Compressors of the circuit (n)	Compressors of the other circuit	Fan condensing of the circuit (n)	Fan condensing of the other circuit
b(n)HP	High pressure switch of the circuit (n)	Yes		Yes after 60 seconds	
b(n)LP	Low pressure switch of the circuit (n)	Yes		Yes	
b(n)AC	Anti-freeze in chiller of the circuit (n)	Yes		Yes	
b(n)AH	Anti-freeze in heat pump of the circuit (n)	Yes		Yes	
b(n)hP	High condensing pressure of the circuit (n)	Yes		Yes after 60 seconds	
b(n)hP	High condensing temperature from NTC of the circuit (n)	Yes		Yes after 60 seconds	
b(n)LP	Low condensing pressure - (evaporating with low pressure transducer) with transducer of the circuit of the (n)	Yes		Yes	
b(n)IP	Low condensing temperature NTC circuit (n)	Yes		Yes	
b(n)tF	Fan overload circuit (n)	Yes		Yes	
b(n)PH	Pump down alarm in stop regulation of the circuit (n)	Yes		Yes	
b(n)PL	Pump down in regulation start-up of the circuit (n)	Yes		Yes	
b(n)dF	Bad defrost circuit (n)				
b(n)Cu	Unloading from condenser high temp/press of the circuit (n)				
b(n)Cu	Unloading from evaporator low temp/press of the circuit (n)	Yes		Yes	
b(n)rC	Recovery function disabled in circuit (n)				
b(n)ds	Circuit (n) disabled from keyboard	Yes		Yes	
b(n)Ac	Anti-freeze circuit (n) message in chiller				
b(n)Ah	Anti-freeze circuit (n) message in heat pump				

(n) identifies the circuit 1 or 2

16.3 ALARM: “C” TYPE AND CORRESPONDING COMPRESSOR OUTPUT OFF

Alarm Code	Alarm description	Compressor (n)	Compressors not involved
C(n)HP	Compressor(n) high pressure switch	Yes	
C(n)OP	Compressor(n) oil pressure switch / Oil level switch	Yes	
C(n)tr	Compressor(n) overload	Yes	
C(n)dt	Compressor high discharge temperature	Yes	
C(n)ds	Compressor (n) disabled from keyboard	Yes	
C(n)Mn	Compressor(n) maintenance		

(n) identifies the compressor 1, 2, 3, 4, 5, 6

17 BLACK-OUT


After the black-out is restored:

1. The instrument resumes the same operating mode lost after the supply failure.
2. If active, the defrost is aborted.
3. All the timers and time parameters are reloaded.
4. The manual alarm is not reset.


18 INSTALLING AND MOUNTING

18.1 PANEL CUT- OUT

The instrument must be mounted on vertical panel, with panel cut-out 150x31mm, and screwed 2 screws $\varnothing 3 \times 2$ mm, in between distance 165mm. The IP65 can be reached with the gasket RG-L (opzionale).
The ambient working temperature range should be between 0÷60°C. Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. The same applies to the probes. Ensure ventilation around the instrument.

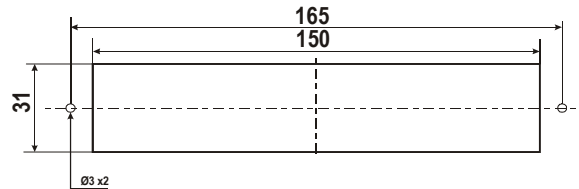


18.2 METAL FRONT FRAME

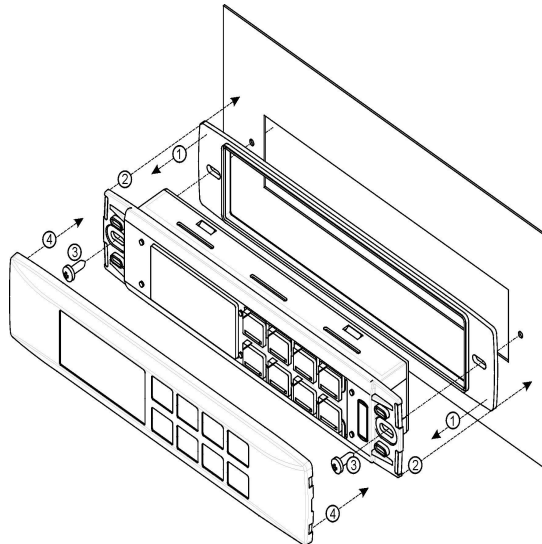


18.3 VERTICAL BOARDS Vi620 – Vi820 PANEL CUT-OUT

The remote terminals are for panel mounting, panel cut-out 72x56 mm, and screwed with two screws.
The IP65 can be reached with the gasket RGW-V (optional).

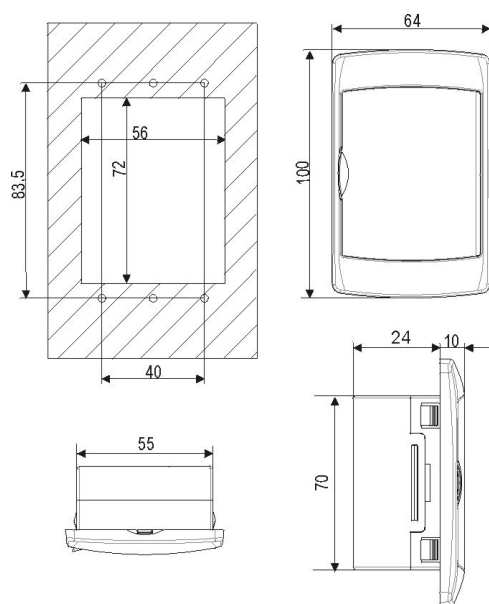

WALL MOUNTING: use the vertical V-KIT (black, white and grey) as described in the following scheme:

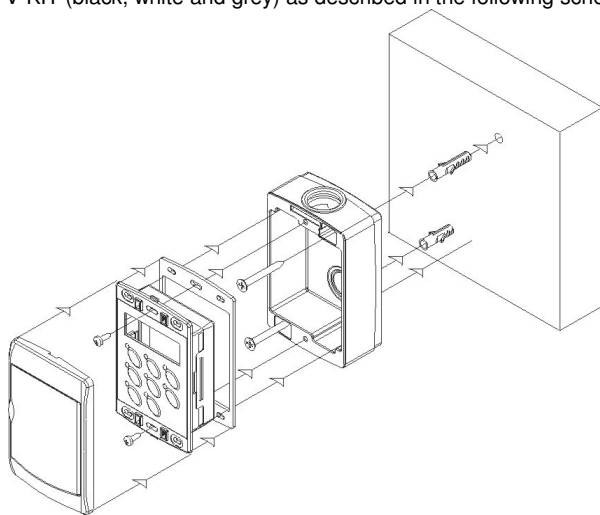

19 ELECTRICAL CONNECTIONS

The instrument is provided with:

- 3 removable terminal blocks MOLEX with 0.5 mm² wires: 16 / 8 / 22 ways for digital / analogue inputs and modulating outputs.
- 4 removable screw terminal block STELVIO for 2.5 mm² wires connection: 3 / 4 / 5 / 6 ways for the relay outputs.
- 5 ways connector for TTL RS485 interface outputs.
- 2 ways connector for remote panels to be connected with the cable **CAB/CJ30**. The remote panels have two terminals for 2.5 mm² wires.
- The **LW30 KIT** is the complete kit with MOLEX + 3 mt wires already connected and the STELVIO terminals.
- Check the connections and the line voltage before turning on the power supply.
- Keep low voltage cables, such as analogue/digital inputs/outputs and probes, away from power cables and terminals.
- Respect the maximum load current of each relay output, in case of power loads use filtered contactors.

20 TECHNICAL DATA

Housing: self extinguishing ABS.

Case: frontal 185x38 mm; depth 70mm (L format)

Mounting: panel mounting in a 150x31mm panel cut-out

Frontal protection: IP65 with gasket

Display:

Top Display 3 digits with d.p.

Bottom Display 4 digits with d.p.

Connections: Removable screw terminal block 2,5mm².

Power supply:

12Vac/dc, -10%÷+15%

24 Vac/dc±10%. 50/60 HZ (optional)

Power absorption: 10VA max.

Inputs: 10 NTC or 6 NTC + 4 (4 ÷ 20ma – 0 ÷ 5Volt)

Digital inputs: # 18 (free voltage)

Relay outputs: 14 SPDT 5(2) A, 250Vac.

Data storing: on the non-volatile memory (EEPROM).

Operating temperature: 0÷60 °C.

Storage temperature: -30÷85 °C.

Relative humidity: 20,85% (no condensing)

Measuring range: - 30÷70 °C (- 22 ÷ 158 °F)
NTC / 0÷150 °C (0÷302 °F) PTC or 0÷ 50 bar
(0÷725 psi)

Resolution: 0,1 °C or 1 °F (selectable)

Accuracy of the controller at 25°C: ±0,7 °C ±1 digit

Dixell S.p.A. Z.I. Via dell'Industria, 27
32010 Pieve d'Alpago (BL) ITALY
tel. +39 - 0437 - 98 33 - fax +39 - 0437 - 98 93 13
E-mail:dixell@dixell.com - <http://www.dixell.com>